

# ASSEMBLY

 The bender may be mounted to anything rigid enough not to twist or move during the bending operation. To mount the bender drill two 3/4" holes 2" inches apart through the mounting surface. The front cover shows the bender mounted on the optional pedestal. *NOTE: You can use the Frame Base to help position the holes the correct distance apart for drilling.* Assemble the bender's frame assembly as shown below.



- Discrete France Descrete resulting surface cliented with your drilled 2/4" holes
- A) Place the Frame Base on your mounting surface aligned with your drilled 3/4" holes.
  B) Place the Lower Frame Link with the notched side to the left on top of the Frame Base aligned with the two 3/4" holes.
- C) Assemble the Rachet and Swing Lever exactly as shown in figures 1,2 & 4 using the 3/4" pin and two 1/8" spring pins. The Swing Lever must rotate almost a full 180 degrees. If the Swing Lever is installed upside down you will be unable to engage the next ratchet tooth during bending. Please, double check it. For hydraulic adapter installation see page 3.
- D) Place the Swing Lever and the 1" Collar on one of the two Spacer Tubes (1" OD tubes). Do not tighten collar.
- E) Install the Upper Frame Link, Ratchet assembly and 1" Spacer Tubes as shown above. Hand tighten the bolts.
- F) Insert the 1" Frame Pin into the 1" Frame Link hole. Slide the 7/8" Frame Pin into hole #5. Tighten the 3/4" nuts as tightly as possible, while insuring the two pins are perfectly vertical and slide easily through their respective holes.
- G) Raise the Swing Lever to the middle of the Tube Spacer and lock into position with the 1" Collar.
- H) Install Degree Plate as shown. Use only your hand to snug down the nut. This nut is never wrench tightened. This allows you to easily adjust the Degree Plate while bending.



Figure 2 - Completed Frame Assembly with Degree Plate



4) Remove all pins from the Drive Link assembly. With the word 'TOP' facing up, Install the Drive Link assembly into the Frame assembly using the 1" Frame Pin. See figure 4. The bender is now assembled and ready for the die set to be installed.

NOTE: The bender requires a handle made of 1" x 2" rectangular tubing with a wall thickness of .083" or .095", cut to 54" long. The bender does not come with a handle because the shipping cost alone are more than an entire length of this tubing. We can supply it if absolutely necessary at an additional cost, however in keeping with the budget minded idea of the Model 3 Bender, it is less expensive to supply your own handle. There is absolutely no need to fabricate a fancier handle. A simple piece of rectangular tubing works the best. NOTE: A 54" long handle should allow the average user to bend 1 3/4" x .095" wall mild steel tubing using just one hand. If bending chromemoly, DOM or larger tubing and find you desire more leverage to reduce the bending effort required, you may extend the handle as needed. Usually a 2 ft. extension is sufficient. If bending smaller tubing, 1" OD for example, we generally use a handle only 24" long.



Figure 4 - Completed bender without die set installed

### Model 3 Bender Hydraulic Adapter Assembly



Bender with hydraulics installed.

#### Adapter Components: Excluding the hydraulics:

Hydraulic Swivel Block Yoke Threaded Extension Rod Clevis Pin

#### **Recommended Cylinder:**

Enerpac RC1014 or the O.T.C. (Power Team) Part# C1014C or an equivalent cylinder. These porta-power cylinders are rated at 10 tons and have a 14" stroke. On the front of the cylinder is a 2 1/4" x 14 TPI thread.

#### **Recommended Power Unit:**

We offer several hydraulic pumps suitable for the Model 3 Bender. However, any power unit may be used that has an output of at least 1500-2500 PSI. The average bending pressure will generally be below 1300 PSI. Tested examples: 1 3/4" x .095" mild steel - 800 PSI, 1 5/8" x .083" 4130 chromemoly - 1300 PSI, 1 1/2" solid round bar stock - 3100 PSI. Note that the air-over-hydraulic 10,000 PSI pumps deliver less volume and therefore bend slower than the air-over-hydraulic 3,000 PSI pumps. A pressure gauge is highly recommended. If the bender is operated at a pressure higher than 2500 PSI the followbar pin may bend. This pin has been designed to be the bender's weak link and therefore acts as a warning indicator of over loading. In other words, if you bend the followbar pin, STOP BENDING IMMEDIATELY. For safe reliable operation do not operate the bender at pressures above 2500 PSI.

#### Assembly:

Remove the outer 3/4" bolt, sleeve and ratchet assembly from the bender's frame. Notice that through the hydraulic swivel block is machined a 2 1/4" x 14 TPI thread and a slight shoulder. The shoulder should face away from the drive links towards the rear of the cylinder. This will allow the cylinder to be screwed all the way flush with the swivel block's front. Place the previously removed 1" OD sleeve into the cylinder swivel block. Using the 3/4" bolt, nut and washers, install the Swivel block into the bender as shown above. Screw the hydraulic cylinder into the block as far as it will go or until its front surface is flush with the swivel block's front surface. The quick disconnect fitting on the rear of the cylinder should point down towards the ground to relieve stress on the hose. If it does not, unscrew the cylinder out of the swivel block until it does, but no further.

If the cylinder has a stud installed into the end of its ram, it must be removed. This will expose a threaded hole in the end of the ram. Screw the Threaded Extension Rod into the cylinder's ram until it bottoms out. Now, screw the Yoke onto the threaded rod until it bottoms out. Rotate the swivel clockwise (to prevent it from unscrewing off the threaded rod) until it may be slid onto the outer 3/4" drive link sleeve as shown above in figure 5. Install the Clevis Pin through the Yoke.

Hook up the pump and hose. Extend and retract the cylinder several times to purge air from the system.

## **Die Set Components**

A Die Set refers to the components that are used in the bender to hold the tubing or pipe during the bending operation. This section does not describe the operation of the bender. This section's purpose is to simply familiarize you with the different components that make up a 'Die Set'. Knowing how the different die set parts interact with each other is essential in operating the bender correctly. The die set must match the size of the tubing or pipe being bent. For example, never bend 1 1/2" tubing in a 1 5/8" die set. This may damage the followbar's inserts.

First, let's explain the difference between *tubing* and *pipe*. Tubing is specified by its outside diameter and a wall thickness. For example, 1 1/2" x .095" *tubing* has an outside diameter of 1 1/2" and a wall thickness of .095". On the other hand, *pipe* is specified loosely on its inside diameter. We say loosely because the pipe's size may not actually be its inside diameter. Confused yet? Just remember pipe is commonly used for the purpose of transporting fluids. Fluid flow is only concerned with the inside area of the pipe and the outside makes no difference what so ever. Pipe wall thickness is specified as a schedule number and is obtained from a pipe chart. Another example, 1 1/2" schedule 40 *pipe* has an outside diameter of 1.900" (larger than 1 7/8") and a wall thickness of .145" and an inside diameter of 1.610" (near 1 5/8"). So, when ordering die sets be careful to specify whether it's a tube or pipe size die set.

#### **ROUND GROOVE DIES:**

A Round groove die set consists of three main elements:

#### 1) Forming Die

This is the part that the tube or pipe actually bends around. It has a circular groove machined around its circumference. Please note that this groove is machined with a specially designed profile to help in reducing flattening of the bend's outside. If you lay a section of tubing into the forming die you will notice that it will NOT completely seat into the die's groove. This is normal for tube size dies and becomes very important as the tube's wall thickness gets thinner. However, forming dies that are machined for 'Pipe' instead of tubing are generally not manufactured with this profile and the pipe may completely seat in the groove. Pipe is much more forgiving when it comes to bending it because of its thicker wall. Stamped into the top is



Forming Die without drive holes

Forming Die with drive holes

the Outside diameter of the tube or pipe and the centerline radius (CLR) of the forming die. Above is pictured a 3/4" die with a 2 1/4" CLR and a 1 1/2" die with a 4 1/2" CLR.

Drive holes are drilled into most dies with a radius of 3" or larger. When the 7/8" drive pin is inserted into the drive links, it will pass through these holes. This is how the drive links rotate the forming die. The 1" drive holes are drilled oversize to permit easy insertion of the 7/8" drive pin.

Die sets with a radius smaller than 3" will generally not have drive holes because there is no room to drill them. As explained in the following section on how to operate the bender, the diameter of the tubing or pipe is so small the bender can be operated without the use of the ratchet mechanism.

#### 2) U-Strap

U-straps are sized to the OD of the pipe or tubing being bent. The size is stamped onto them.



U-Strap for round groove dies

#### 3) Followbar (Also referred to as the Pressure Die)

The Followbar is the component that presses the tubing into the forming die to create the bend. Shown in the illustration below, it consists of three main parts: a backing block, an angled rear insert and a straight 0 degree front insert. This multipart design allows the inserts, if damaged or worn out, to be inexpensively replaced without having to purchase a whole followbar assembly. The Inserts are permanent cast from a special bearing grade anti-galling material to protect the tubing from scratching during the bending process and then CNC machined to size. They are silverish in color but are NOT aluminum.

#### **REPLACING INSERTS**

The placement of the inserts into the backing block must be done properly or poor quality bends will result. Notice one insert is marked 0 degrees. The other insert will be marked with the angle that is appropriate for the radius of the forming die (usually 3 or 5 degrees). The angle in the rear insert helps to support the tube or pipe after the point of bend, greatly reducing flattening. When bending, the angled insert will always be closer to the forming die, and the U-strap for that matter, than the 0 degree insert. Notice in the figure to the right, that the tall side of the angled insert must face the U-strap side of the die.

The front 0 degree insert has a chamfer machined into one side of its groove. This chamfer must face away from the rear insert, thus allowing the tube or pipe to slide through easier. How a bots

To replace the inserts, simply lay the Backing Block flat with the engraving facing up. The Backing Block may or may not be as thick as the inserts. If it is thinner, place



<sup>1 1/2&</sup>quot; OD Followbar Assembly

spacers under the Backing Block so that when the inserts are inserted they are centered in the dovetails. This is important. Now tighten the 1/2" locking bolts and you're done.



#### COMPLETE ROUND GROOVE DIE SET

Above is pictured all of the components which make up a complete die set for round tubing or pipe. In the figure to right, you can see two red lines drawn at 90 degrees apart. These lines are marked as 1 and 2. Line 1 runs from the center of the forming die's center hole to approximately the middle of the angled rear insert. Line 2 runs from that point parallel to the tubing. This illustrates the basic principle of how the components relate to each other. It is vital that when bending the rear insert is positioned as shown. For example, suppose the followbar in engraved with hole 6 as shown, but you install it in hole 7. The rear insert will be shifted to the right of line 1 and the angle machined into it will have no effect during bending. This will generally cause flattening of the tubing's outer side and may also cause wrinkling. If you experience this problem and you have the followbar installed in the correct hole, the rear insert's bending position can be easily checked. Simply place a short piece of tubing into the bender as if your were actually going to bent it. Apply enough bending force to remove any play but not actually bend the tubing. Now hold a 90 degree carpenter's square above the bender so that its outside edges are positioned similar to the red lines shown. The center of the angled rear insert should be roughly at the corner of the square. I say roughly because some dies are designed to shift the insert slightly to the left or right of center to improve bend quality. However, this will generally be less than 1/4". If as in the example above, you placed the followbar in the wrong hole, the insert will be very noticably off center and almost always to the right of red line 1.

#### SQUARE AND RECTANGULAR GROOVE DIES:

Square groove dies operate similar to the round groove dies explained earlier with these exceptions:

- The bottom of the groove has a raised crown machined into it. This starts the depression in the bottom side of the tubing during bending to prevent the tube from kinking and helps keep the sides reasonably straight. Note that square tubing will always sink in on the outside and inside of the bend.
- The U-strap clamp uses a bolt to tightly secure the tubing to the die block. This bolt presses against a H shaped steel plate to prevent the
- bolt from marring the tubing. To the right is an illustration of the tubing installed in the forming die.
- The followbar does not utilize inserts. It is machined from one solid piece.
- 4) You must lubricate both the outside of the tubing and the COMPLETE groove in the forming die before bending. Square tubing tends to wedge itself into the forming die while bending and generally requires a large rubber mallet to tap it out when finished. The bigger the tubing, the worse the problem. Without lubricant it can be very difficult to remove the tubing from the die. This problem is not specific to the Model 3 Bender, but to ALL benders utilizing a one piece die.



### **DEGREE POINTER INSTALLATION**

Current production forming dies are made to accept a degree pointer. This is supplied as a straight piece of 3/32" copper coated steel rod. The illustration below shows the pointer installed on the forming die. You will need pliers and a wire cutter to fit the pointer. First install the die set into the bender, preferably with a length of tubing installed also. On the backside of the forming die's die block, you will see a thin groove with a washer and bolt installed next to it. Using the illustration below as a guide, bend the wire pointer to fit, making sure it clears the U-strap and drive links. Allow approximately 1/16" clearance above the degree markings. Notice we've placed a small bend in the pointer's lower end so that it aligns with the degree markings. This makes it easier to read when

bending. When you are happy with the fit, tighten the pointer lock bolt to secure the pointer onto the forming die. The pointer should be left on the die even after the die is removed from the bender. When storing the die set be careful not to bend up the pointer. However, this is just common 3/32" copper coated TIG welding rod, so if you do manage to mangle, damage, decimate, disfigure, batter, hurt, mutilate, warp, destroy, lose, smash, wreck, maim, ravage, sabotage, trash, demolish, vandalize. incapacitate, ruin, obliterate, cripple, (... deep breath ...) spoil, break, annihilate, brutalize, make inoperable, or otherwise extinguish its very existence, just visit your local welding supply to get a new one.



Pointer installed on the backside of the Die Block

## **Die Set Installation and Bending Procedure**

There are two types of forming dies provided for the Model 3 Bender. Those with drive holes and those without. The drive holes are the five 1" holes drilled in a circular pattern around the forming die's center hole. A 7/8" diameter pin inserts through the drive links and through the forming die's drive holes when in operation. The drive holes are drilled 1/8" oversize to provide easier pin installation. To prepare for bending, follow the steps below depending on the type of die set. *NOTE: The procedures below describe using the degree indicator. To install an indicator onto your forming die, please refer to that section earlier in this manual.* 

#### WITH DRIVE HOLES:

Place the forming die into the bender using the 1" frame pin. If bending square tubing, thoroughly lubricate the forming die's groove. However, if bending round tubing or pipe, NEVER lubricate the forming die's groove. If you do, the tube will tend to slip backwards in the die while bending, which in turn causes the tubing to kink or wrinkle. Place the tube into the forming Die. Install the U-Strap with the shorter 7/8" U-strap pin. If necessary, tighten the U-strap bolt to prevent the tube from slipping through the die will bending. It's a good idea to cut a slice out of a bigger piece of tubing place it between the bolt and tubing to prevent the bolt from dimpling the tubing. If bending thin wall tubing (.065" or thinner) you must always use the U-strap bolt.

Bending with drive holes and ratchet

Next, using the 7/8" Followbar Pin, place the Followbar

into the bender. See page 5 for the correct way to install the Followbar. Lightly spray some lubricant on the outside of the tubing so that the tubing will slide through the Followbar easily. Any spray lubricant works well. If you are bending tubing with a wall thickness of .065" or thinner you may want to skip the lube entirely. This will help the followbar stick to the tubing during ratchet repositioning and generally helps prevent wrinkling. **Make sure all pins are completely seated in their holes. Failure to do this may cause damage to the bender links or worse yet the operator may slip and fall.** 

Place the 1" x 2" box tube handle over the Swing Lever making sure the Handle is as far forward as possible on the Swing Lever. Rotate the Swing Lever fully counter-clockwise. Engage the Rachet onto the outer 3/4" drive link spacer tube. Lightly pull on the handle to preload the tubing. Do not pull hard enough to actually bend the tubing. Using a free hand, loosen the degree plate nut. Rotate the degree plate until the die's pointer is at 0 degrees and then hand tighten the nut to secure it into position. Now you're ready to bend. Pull on the handle in a clockwise direction until the Swing Lever cannot rotate any further. Return the Swing Lever to the starting position. Initially release the Ratchet easily so as not to move the tubing and minimize spring back. Reengage the ratchet and pull again. When the last Ratchet tooth is reached, return the Swing Lever to its starting position. Remove the 7/8" Drive Pin and rotate the Drive Links counter-clockwise until the Drive Pin may be reinstalled through another hole in the Bending Die. Be careful not to move the tube. Now repeat the above bending sequence until the desired degree of bend is obtained. To release the tubing from the bender, remove the handle from the Swing Lever. Insert it diagonally through the 3/4" drive link spacer tubes and pull counter-clockwise. The Followbar will release its grip and the tubing may be removed.

#### WITHOUT DRIVE HOLES:

These dies typically have a center line radius of less than 3". Because the radius of the die is so small, drive holes cannot be drilled into the die. This does not present a problem as the tube sizes for these dies is of relatively small diameter and is easily bent. The ratchet is not used.

#### Die installation procedure:

Swing the ratchet assembly out of the way as shown below. Place the forming die into the bender. Place the tubing to be bent in the bender and using the 5 1/4" long drive pin (not the shorter U-Strap pin that is usually used) install the U-strap. If desired, tighten the U-strap bolt to secure the tubing to the die. This is not mandatory and may be omitted if the tubing shows no signs of slipping through



Handle installed and ready to bend without drive holes

the die while bending. Now install the followbar being sure the word 'TOP' is facing up. Rotate the drive links until their front edge pushes directly on the U-strap pin as shown in figure 6. Place the handle diagonally through the drive links' two 3/4" spacer tubes. Lightly pull on the handle to preload the tubing. Do not pull hard enough to actually bend the tubing. Using a free hand, loosen the degree plate nut. Rotate the degree plate until the die's pointer is at 0 degrees and then hand tighten the nut to secure it into position. Now, simply pull the handle and observe the pointer until the desired degree is reached.

# EXAMPLE BEND

The first thing you need to do is to determine the actual starting location of a bend produced by the Bending Die you installed in the bender. This can vary between die sets and must be checked for every die set purchased. In the below example we are using 1 1/2" O.D. tubing and a Bending Die with a Center Line Radius of 6 1/2".

#### Here's the procedure:

A) Place a piece of tubing (app. 2 1/2' long) into the bender so that exactly 12" extends out from the edge of the die to the end of the tubing when the tubing is fully seated in the Bending Die's groove. Place a little bending pressure on the tube so as to seat the tubing in the Bending Die. Not enough to start bending the tubing just enough to seat it in the groove. NOTE: If you lay a small length of tubing in the groove of a Bending Die you will notice the tubing does not seat to the

bottom of the groove. The Bending Dies are deliberately machined this way so that during the bending operation a side force is developed in the tubing. This helps to reduce flat spotting and wrinkles.

- B) Using a Black Magic Marker mark a line on the tubing precisely at the edge of the die. See figure 7.
- C) Bend the tube to an exact 90 degrees. Use a carpenters square to check the angle. You will have to overbend the tube a little to account for springback. How much to overbend will come with practice. If you overbend the tube a little don't worry. Because cold worked steel has memory, you can place the tube in a vise or anything else that will retain it, and simply unbend it. Obviously this only works for small amounts of overbend. If the tubing is underbent, it will be necessary to put it back into the bender. D) With the tube bent correctly to 90 degrees



Mark here at the saw cut edge of die (not at the followbar's insert)

locate the actual start of the bend. To do this, measure from the end of the tube to the far end of the 90 degree bend. In the example in figure 8 this came out at 20 1/4". Subtract 6 1/2" for the centerline radius (CLR) of the Bending Die, another 3/4" for the radius of the tubing not seated in the die, and 1/8" for springback. (Substitute the CLR and tube radius to match your die set). The 1/8" figure for springback is an approximation, not an exact figure. However it is usually very close to the real thing and may be used without worry to determine the actual starting location of the bend. So:



20 1/4" - 6 1/2" - 3/4" - 1/8" = 12 7/8"

Now subtract from the 12 7/8" the original 12" we had marked earlier and you find that the bend will actually start 7/8" in from the edge of the bending die. Now we know for example, if we want 40" from the end of the tubing to the start of the bend, we must subtract 7/8" from 40" and set the tubing 39 1/8" from the edge of the Bending Die.

Another example, you want 36" from the bottom to the top of a rollbar. Tube size is 1 3/4" and you have an actual bend start 1/2" inside of the Bending Die's edge. The CLR of the Bending Die is 7 1/2". So: 36" - 1/2" (Actual Bend start) - 7 1/2" (CLR of die) - 7/8" (Half of the tubing diameter) - 1/8" (Springback) = 27". Set the tube 27" from the edge of the Bending Die and make the bend.

Figure 8

#### Example hoop :

Preparation is the key to making accurate bends. To make multiple bends in one section of tubing you will need a universal protractor. The protractor is then clamped, using a machinist v-block and a radiator hose clamp, to the tube. Make sure the pointer indicates '0' before making your first bend. Also using a carpenter's level, make sure the tube is entering the bender level. On the second bend if you turn the tube so that the pointer again reads '0' and the carpenter's level indicates the tube is level, both bends will be on the same plane with no noticeable twist.

First step is to draw a sketch of the intended shape and all measurements. Figure 9 below is the desired hoop. The Bending Die has a centerline radius (CLR) of 6 1/2". The tube O.D. is 1 1/2". We determined earlier, using the method described on page 4, that the Bend Start measurement is 3/4" behind the edge of this particular Bending Die set.



Figure 9- Example hoop.

1) Determine the total length of tubing needed. Using a calculator and the formula below let's add it all up.

#### 6 1/2" (CLR of bend) x 90 (Number of degrees of bend) x .0175 = Length of tubing used in a bend.

Using the formula above we get 6 1/2" (CLR of bend) x 90 (Degrees of bend) x .0175 = 10.2375. Let's round this off to 10 1/4" inches (10.250"). This is the amount of tubing used in the bend. We have two bends so we double this and get 20 1/2". Add to this the straight sections and we get 20 1/2" (tubing in bends) + 27 (the center section) + 13 1/2" for the left upright + 13 1/2" for the right upright = 74 1/2" of tubing needed. It's usually a good idea to leave a couple of inches extra on the end. Remember, it's easier to remove tubing then to add it. So let's add 2" to 74 1/2".

2) We cut our tube to 76 1/2". It's generally easier to work from the center out when making two bends in a tube. Divide 74 1/2" by 2 and our center point is 37 1/4" from the end of the tube. Place a mark on the tubing 37 1/4" in from one edge and mark the tubing so you will know which side is the 37 1/4 side and which side is 39 1/4". Notice we didn't use the 76 1/2" measurement that we cut our tubing to. This way we only have to cut 2" off one end of the finished tube instead of 1" off each end. The first bend is made on the short 37 1/4" side.

3) Using the method described on page 4 we determine that the tube should extend 12 5/8" from the edge of the Bending Die. Below is the equation from page 4.

20" (Height of hoop) - 6 1/2" (CLR of die) - 3/4" (1/2 of tube's dia.) - 1/8" (Springback) - 3/4" (Bend Start) = 11 7/8".

After making the bend we have half our hoop completed. The top of the bend is 20" from the bottom of the tube.

4) Now for the other bend. First we need to determine how much the tube stretched in the bend area. From figure 9 we see that the tube should be 20 3/4" from the outside edge to our 37 1/4" center mark. However after measuring from our center mark to the outside edge of the bend we now have 21" and not the planned 20 3/4". This 1/4" increase is due to springback and the tube stretching in the area of the bend.

If we now repeated the second bend, using the same 125/8" from the end of the tubing +2" for the extra tubing we allowed, we would end up with a hoop 1/2" too wide. This is because the 1/4" stretch developed in the first bend will also be developed in the second bend, giving us 1/2" total increase in width. Not a good deal if you only want a 40" wide hoop. So what's the solution. Actually there is two ways to do it.

#### FIRST METHOD:

Look at figure 9 and notice the second bend starts at the top of the hoop and not at the top of the upright as the first bend did. Also the start of the second bend is drawn as 13 1/2" from the center mark. If you take the 13 1/2" measurement and subtract the 1/4" of growth that was developed in the first bend and another 1/4" to compensate for the second bend's growth you end up with 13". Subtract another 3/4" to account for the 3/4" Bend Start location on the Bending Die set and we have a final setting of 12 1/4". Notice we did not subtract an 1/8" for springback. This is accounted for already in the 1/4" we added for the second bend's growth. Set the tube so that the Bending Dies edge is exactly 12 1/4" from the center mark. Make sure the universal protractor reads '0' and the carpenter's level is centered. As one final check you can also measure from the far side of the completed bend to the edge of the bending die. See figure 10. This measurement should read:

40" (width of hoop) - 3/4" (radius of tube not in bending die) - 1/8" (springback allowance) = 39 1/8"

Make the second bend. Measure the height of the second upright and cut off the extra tubing we allowed for earlier.



Figure 10

#### SECOND METHOD:

The second method is basically the opposite of the first method. The second bend will start at the bottom of the upright and *NOT* at the top of the hoop as in the first method and as shown in figure 10. We use the same method as used to bend the first bend with a few exceptions. First calculate the starting point for the second bend as shown below:

20" (total height of hoop) - 6 1/2" (CLR of bending die) - 3/4" (Bend Start) = 12 3/4"

Add 2" to account for the extra tubing we allowed earlier. Also add the 1/4" growth developed in the first bend and another 1/4" for the second bend. DO NOT ADD 1/8" SPRINGBACK. Once again this is already accounted for in the 1/4" growth of the second bend. We end up with:

Set the tube's end at 15 1/4" from the Bending Die's edge. Make sure the universal protractor reads '0' and the carpenter's level is centered. Make the second bend. Measure the height of the second upright and cut off the extra tubing we allowed for earlier.

Thank you for purchasing the Model II Bender. Any further questions please call.

```
© Copyright 2004 by J D Squared Inc.
```