Distributed by: Trick-Tools_com

Trick-Tools 80 Truman Road Pella, IA 50219

Phone:1-877-VAN-SANT

E-mail: sales@trick-tools.com





Here at Trick Tools we believe that our customers deserve the best value in their tool and equipment purchases. We are constantly at work searching out a variety of high quality, high performance tools to offer at the best prices possible. Our commitment to you is that we will not offer "cheap junk" anywhere on our website. You, the customer, help us to evaluate our products constantly and as soon as an ongoing quality issue is uncovered we will correct it or discontinue that product immediately. We hope to earn your continued trust.



RAMS-2004 24" CLEAT BENDER

Capacity 20 Ga. Mild Steel Maximum

OPERATION:

Do not use the Cleat Bender to bend rods, nails or wires.

The segmented base of your cleat bender is designed so that duct sections and fittings of almost any dimension will fit into the bender easily.

Insert your notched duct flange under the upper blade of the cleat bender. Raise the top handle completely until it until it rests on step blocks. Leave the top handle in this position and release the lower handle by compressing the latch and raising the handle until lower leaf touches the top leaf. At this time, slightly lower both handles simultaneously to allow the duct section to release from leaf. When released, withdraw the duct section from the tool. Return both handles to their normal down position. Return duct section to step blocks and close drive cleat edge with top leaf to desired profile gap. Your drive cleat edge is now complete.

The cleat bender can also be used to make the actual drive cleats used in joining dual sections together. The drive cleat blanks should be sheared or slit into appropriate width, approximately 2-1/8 inches. The bending procedure is the same as for the drive cleat edges on ducting with the exception that the lower handle does not have to be released to remove the cleat after each bend. Use the top leaf of the cleat bender to close the drive cleat edge to 180 degrees.

*See product video for more information.

MAINTENANCE:

Periodically, tighten all screws and bolts to ensure proper operation and performance.