


LEGEND TABLE N°1

DRIVE TRAIN

1 - SPALLAPORTCPH40A	FRONT PLATE
2 - SPALLAPORTCPH40P	REAR PLATE
3 - RINF40CENSPALLA	CENTRAL REINFORCEMENT SPACER
4 - RINF40LATSPALLA	LATERAL REINFORCEMENT SPACER
5 - DIST40RINFINGSX	LEFT REINFORCEMENT BAR (LIMIT SWITCH HOLDER)
6 - DIST40RINFINGDX	RIGHT REINFORCEMENT BAR
7 - TASSELLO40PRESS	FORMING BLOCK
8 - ALBERO40TRAIN	UPPER SHAFT
9 - VTDEM24MB	ROLLS LOCKING NUT
10 - ROND40BLOCMAT	ROLLS LOCKING WASHER
11 - VTCE04X010	SCREW
12 - CHTRAINCPH40	ROLLS KEY
13 - CH1008035	TOP SHAFT GEAR KEY
14 - VA000004	TOP SHAFT BEARING COVER
15 - VA000005	LOWER SHAFT BEARING COVER
16 - VA000004	BEARING SEAL
17 - CU32208	CONICAL ROLL BEARING
18 - VTCE06X030	SCREW
19 - VTGRPPIANA10X040	SET SCREW
20 - VTGRPPIANA12X020	LOCKING SCREW
21 - VTBCE08X020	SCREW
22 - PIASTRA40ANCPIST	CYLINDER STEM LOCK PLATE
23 - PATTINO40ANT	FRONT GUIDES
24 - PATTINO40POS	REAR GUIDES
25 - CARTER40PROTTAS	COVER
26 - VTCE06X012	SCREW
27 - VTKM08	LOCK RING NUT
28 - VTMB08	LOCK RING
29 - PA00500ST0140	KNUCKLE JOINT "FOMES"
30 -	LOCKING SCREW
31 - BUSSOLA40ANTLAT	FRONT/LATERAL BEARING JOURNAL
32 - VTCE10X045	SCREW
33 - BUSSOLA42POSLAT	REAR/LATERAL GEARING JOURNAL
34 - GIUNTO40TRASLAT	RIGID SHAFT
35 - PATTINO40GUIDA	GUIDE
36 - VTSPEI06X010	SCREW
37 - VTCE12X035	SCREW
38 - VTCE08X025	SCREW
39 - VA000001	REINFORCEMENT BAR SCREW
40 - DIST40LATSPALLA	SPACER

DRIVE TRAIN

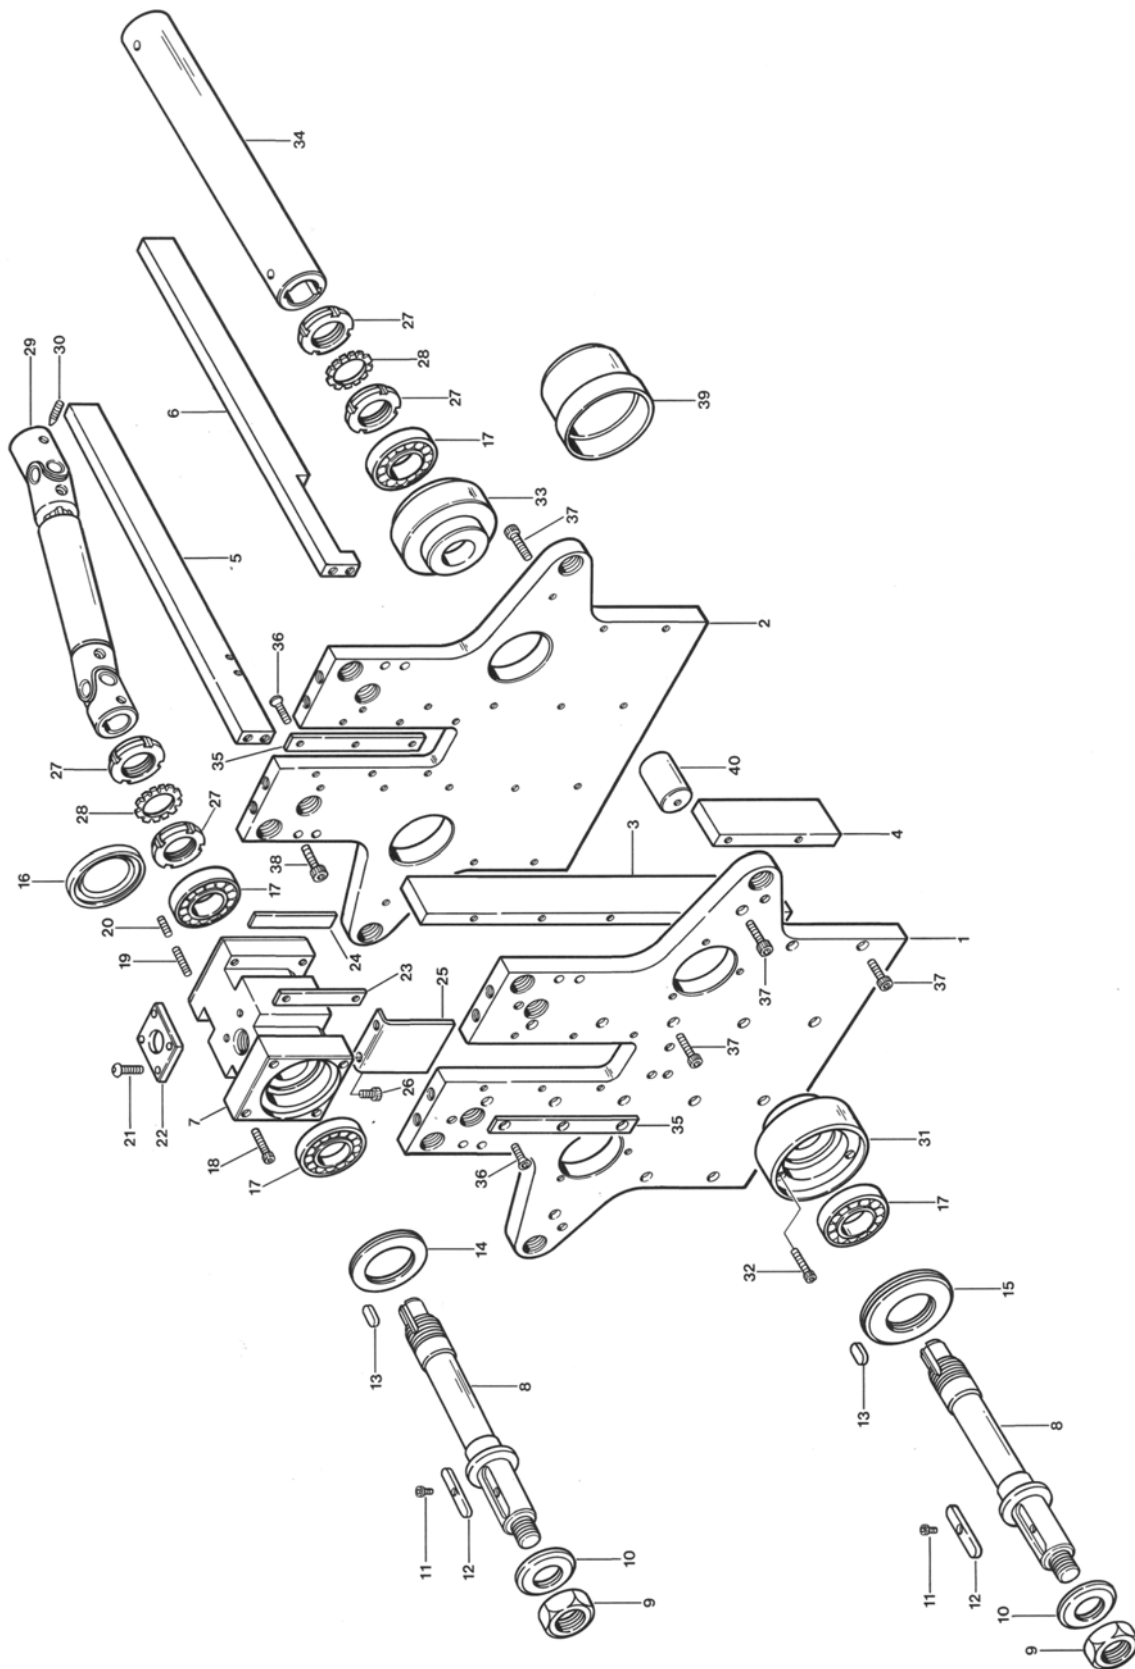


LEGEND TABLE N°2

GEAR SYSTEM

1 - <u>SPALLACPH40ING</u>	GEAR PLATE
2 - <u>IN40246200000</u>	BACK GEAR DE=246mm (9,68")
3 - <u>IN40186130030</u>	TOP ROLL TRASMISSION GEAR
4 - <u>IN401864400FR</u>	TORQUE LIMITING DEVICE GEAR
5 - <u>ALBERO40MOTORE</u>	MOTOR GEAR
6 - <u>IN40SAT</u>	CENTRAL PLANETARY GEAR
7 - <u>LIMCPH40</u>	TORQUE LIMITING DEVICE "ROBA MEYR"
8 - <u>ALBERO40LATSX</u>	LEFT SHAFT
9 - <u>ALBERO40FRIZ</u>	TORQUE LIMITING DEVICE SHAFT
10 - <u>ALBERO40CENTR</u>	CENTRAL SHAFT
11 - <u>ALBERO40LATDX</u>	RIGHT SHAFT
12 - <u>MRC302P156</u>	MOTOREDUCER
13 - <u>CH0807040</u>	GEAR KEY
14 - <u>CH0807018</u>	GEAR KEY
15 - <u>CH0807018</u>	GEAR KEY
16 - <u>CH0807060</u>	GEAR KEY
17 - <u>CH0807040</u>	GEAR KEY
18 - <u>DIST40APPOST</u>	SPACER
19 - <u>VTCE12X040</u>	SCREW
20 - <u>BUSSOLA40MOTORE</u>	BEARING JOURNAL
21 - <u>CU30206</u>	CONICAL ROLLS BEARING
22 - <u>BUSSOLA40ANTLATI</u>	BEARING JOURNAL
23 - <u>BUSSOLA40POSLATI</u>	BEARING JOURNAL
24 - <u>BUSSOLA40CENTING</u>	BEARING JOURNAL
25 - <u>VTKM06</u>	LOCK RING
26 - <u>ROND30BLOCING</u>	GEAR LOCK WASHER
27 - <u>VTSP EI10X020</u>	SCREW
28 - <u>VTCE10X030</u>	SCREW
29 - <u>VTRP10</u>	WASHER Ø 10MM
30 - <u>CU060102RS</u>	RADIAL BEARING 6002 2RS
31 - <u>VTRP10</u>	WASHER Ø 10MM
32 - <u>VTCE10X035</u>	SCREW

GEAR SYSTEM

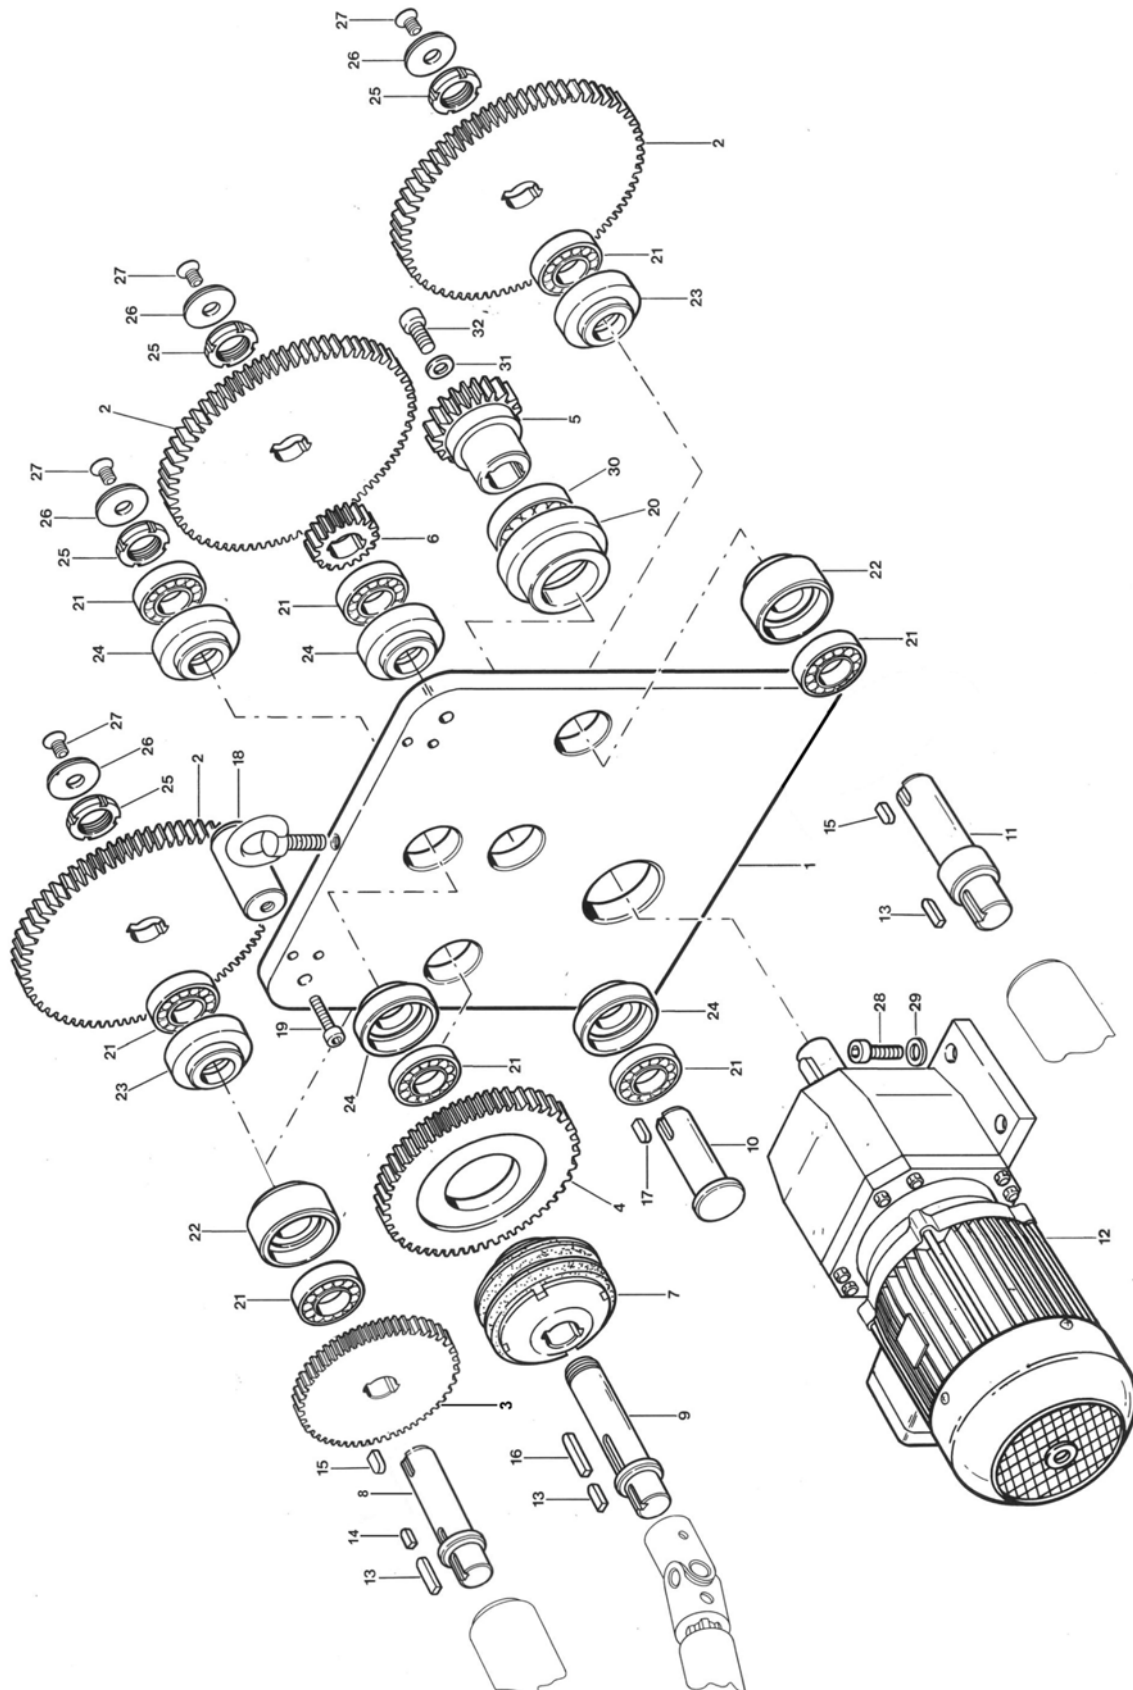


LEGEND TABLE N°3

ROLLS AND GUIDE ROLLS

1 - MATR40L02SP12	UPPER SHOULDER FLANGE NARROW SMOOTH
2 - MATR40L46SP27	UPPER SHOULDER FLANGE WIDE SMOOTH
3 - DIST40LSP105	UPPER CORE SPACER SMOOTH 10.5 mm
4 - DIST40LSP125	UPPER CORE SPACER SMOOTH 12.5 mm
5 - DIST40LSP145	UPPER CORE SPACER SMOOTH 14.5 mm
6 - DIST40LSP185	UPPER CORE SPACER SMOOTH 18.5 mm
7- VTRSC16	WASHER SCHNORR Ø 16MM
8- VTCE16X025	SCREW
9- TA000061	ALUMINUM SPACER 1 mm. THICK
10- TUBO40RADD	GUIDE ROLL
11- ASTA40RADD	CORRECTING ROLL PIN
12- SNODO40RADD	OSCILLATING JOINT
13- VTGRPPIANA08X010	SET SCREW
14- CU060022RS	RADIAL BEARING 6002 2RS
15- VITE40REGRADD	LATERAL GUIDE ADJUSTING SCREW
16 - ROND40DISTRADD	SPACER

ROLLS AND GUIDE ROLLS

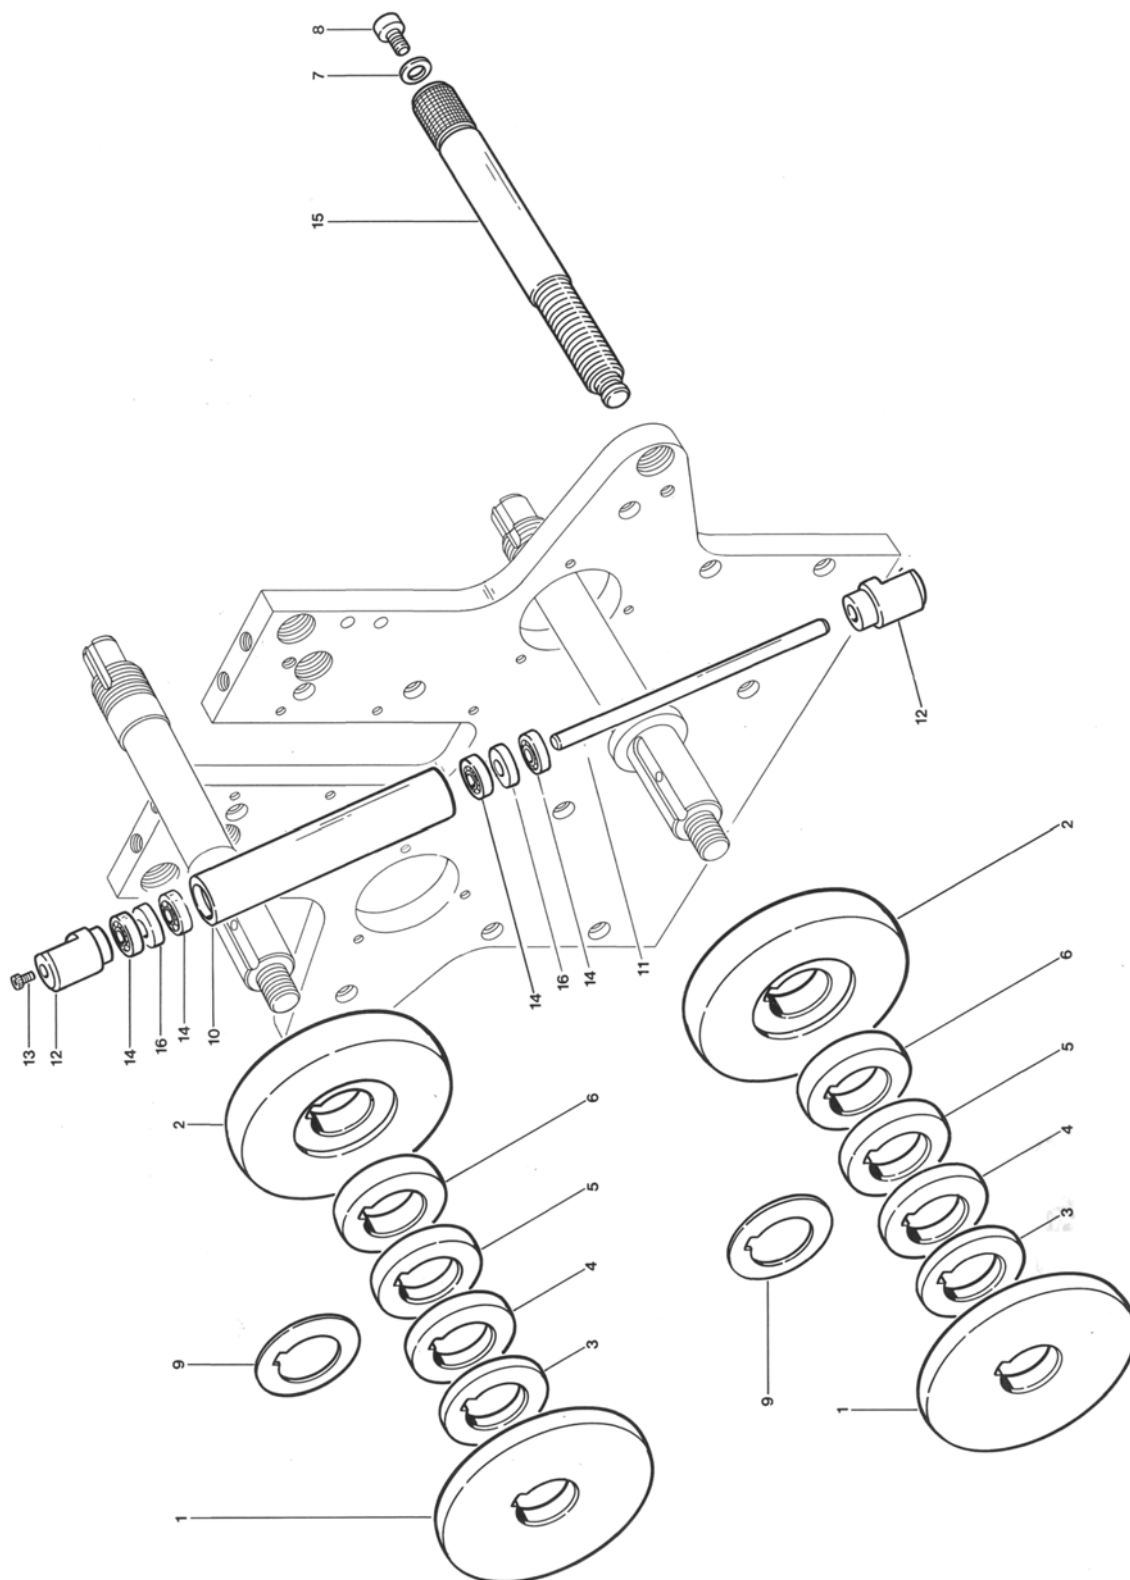


LEGEND TABLE N°4

HYDRAULIC SYSTEM - MOTOR TOP FORMING ROLL POSITIONING

1-	<u>PIASTRABASECPH40</u>	BASE PLATE
2-	<u>CILCPH40</u>	HYDRAULIC CYLINDER
3-	<u>TBR014FF0385</u>	OIL HOSE
4-		PUMP MOTOR
5-	<u>VTGOLM12</u>	EYE BOLT
6-	<u>VTCE12X045</u>	SCREW
7-	<u>RONDBONDED014</u>	O-RING FOR FITTING
8-	<u>NIPPLO014</u>	FITTING
9 -	<u>EVVRS710</u>	PILOTED NON RETURN VALVE
10 -	<u>TBBR018FF0350</u>	OIL HOSE
10a-	<u>TBBR018FF0440</u>	OIL HOSE
11 -	<u>MASSELLON12</u>	MANIFOLD PLATE
12 -	<u>EVDMD1DS455</u>	SOLENOID VALVE
13 -		SOLENOID VALVE LOCKING SCREW
14 -		SOLENOID VALVE PLUG
15 -		MANIFOLD PLATE SCREW
16 -		WASHER
17 -		WASHER
18 -	<u>MINIMEX014</u>	PRESSURE GAUGE CONNECTION
19 -		HYDRAULIC PUMP/TANK
20 -	<u>MICROEXZ156</u>	SAFETY LIMIT SWITCH
21 -	<u>VTCE04X025</u>	SCREW
22 -	<u>PIASTRTRASDCPH40</u>	SUPPORT
23 -	<u>VTCE06X016</u>	SCREW
24 -	<u>TPPA1F100S2XL123</u>	LINEAR TRANSDUCER
25 -	<u>STAFFA40SUPPOMPA</u>	HYDRAULIC PUMP/TANK SUPPORT PLATE
26 -	<u>VTRSC10</u>	WASHER
27 -	<u>VTCE10X020</u>	SCREW
28 -	<u>VTCE08X016</u>	SCREW
29 -	<u>VTRSC08</u>	WASHER
30 -	<u>VTRP12</u>	WASHER
31 -	<u>VTCE12X035</u>	SCREW

HYDRAULIC SYSTEM - MOTOR TOP FORMING ROLL POSITIONING

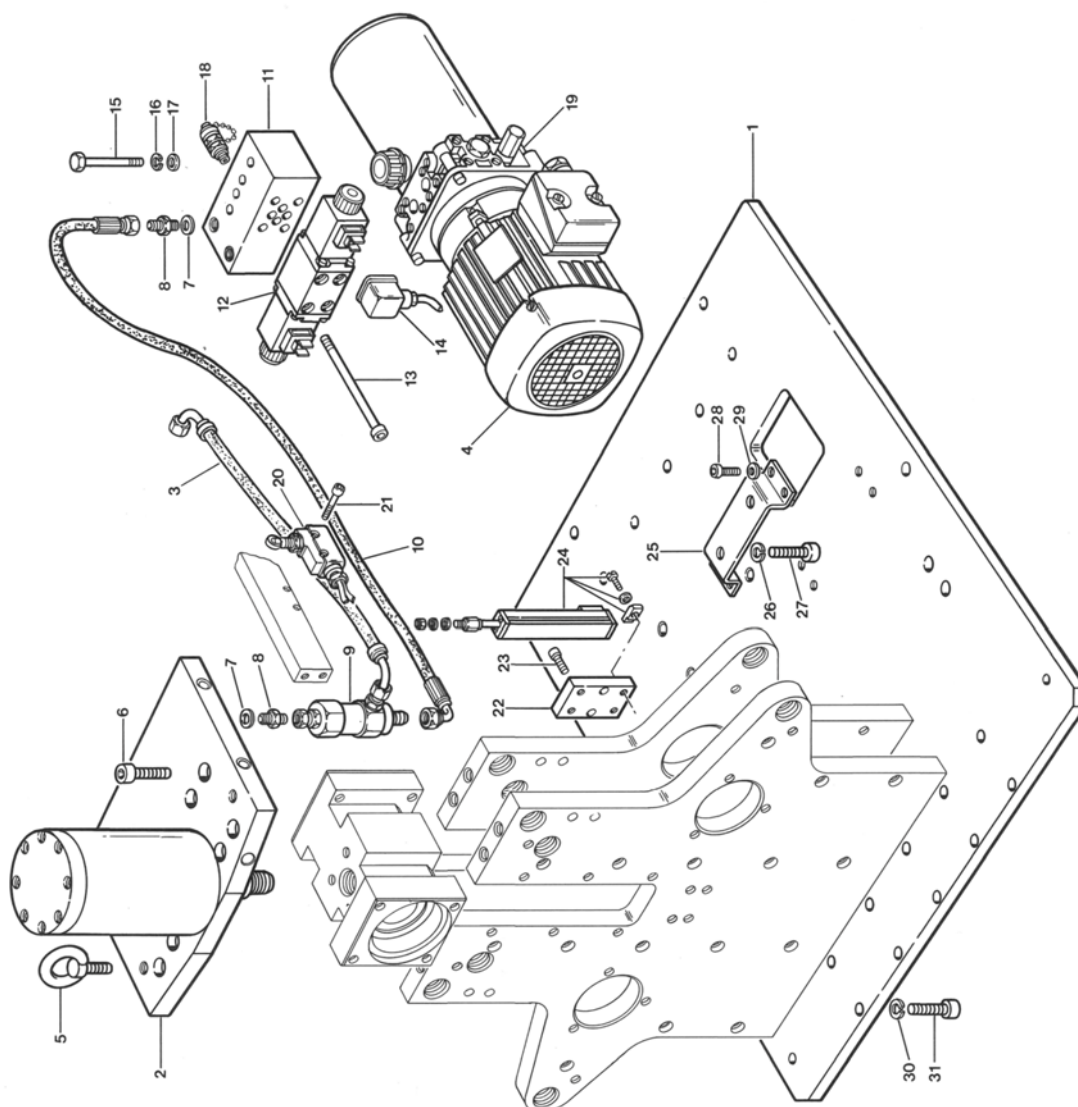

LEGEND TABLE N°5

BASE - COVER - ELECTRICAL COMPONENTS

1 - CARTER40BASAM	BASE
2 - CARTER40POS	REAR COVER
3 - CARTER40ANT	FRONT COVER
4 - CARTER40SPORTQE	ELECTRIC PANEL COVER
5 - PDSPBERSTEINSRIA	FOOT PEDAL
6 -	MAIN SWITCH
7 -	LOCK
8 - TA000022	“BPR” INFORMATION PLATE
9 - TA000117	“CE” SIGN
10 -	INSPECTION COVER
11 - VTBCE04X012	SCREW
12 -	CLIP NUT
13 - TA000105	WARNING SIGN
14 - TA000153	TECNICAL SIGN
15 - TA000112	WARNING SIGN
16 -	PEDAL COVER
17 - SOFFCPH40	ELASTIC COVER
18 - TA000017	WARNING SIGN
19 - PCPG130	CABLE PASS
20 - PCPG16N	CABLE PASS
21 -	MULTIPIN CONNECTOR
22 - VTBCE04X012	SCREW
23 - MANCPH40CP40CPH6	SUPPORT
24 - CARTEREP8PIANT	PEDAL STAND
25 - PIEDINOCPH40INF	FOOT
26 - VTCE12X025	SCREW
27 - PIEDINOCPH40SUP	FOOT
28 - VTCE12X025	SCREW
29 - CABPTEP8	FOOT PEDAL CABLE
30 - EP8PANNELLO	CONTROL PANEL
31 - VTBCE06X012	SCREW
32 - TA000003	“STOP” SIGN
33 - EL000040 / EL000041	
34 - FUNGOCPS20354060	EMERG. PUSH BUTTON
35 - VTBCE04X012	SCREW)
36 -	CLIP NUT

BASE - COVER - ELECTRICAL COMPONENTS

