

LEGEND TABLE N°1

DRIVE TRAIN


1 - SPALLAPORTCPH60A	FRONT PLATE
2 - SPALLAPORTCPH60P	REAR PLATE
3 - TASSELLO60PRESS	BLOCK WAYS
4 - ALBERO60PRESS	IDLE UPPER SHAFT
5 - ALBERO60TRAIN	LOWER DRIVING SHAFT LF RT
6 - ALBERO60CENTR	CENTRAL GEAR SHAFT
7 - ALBERO60MOTORE	MOTOR GEAR SHAFT
8 - IN60SAT	CENTRAL PLANETARY GEAR
9 - IN60328510CEN	CENTRAL GEAR
10 - IN60328120LAT	LATERAL GEAR LF RT
11 - BUSSOLA60ANTLAT	FRONT BEARING JOURNAL
12 - BUSSOLA60POSLAT	REAR BEARING JOURNAL LF RT
13 - BUSSOLA60CENTING	REAR JOURNAL OF CENTRAL SHAFT
14 - BUSSOLA60CENTING	REAR JOURNAL OF CENTRAL SHAFT
15 - CU32212	1TH SHAFT BEARING (CONICAL ROLLS)
16 - CU32209	CENTRAL SHAFT BEARING (CONICAL ROLLS)
17 - VTKM12	LOCK RING NUT
18 - VTKM09	LOCK RING NUT
19 - FLANGIA60BLOCING	LOCK FLANGE
20 - FLANGIA60BLOCALP	LOCK FLANGE
21 - VA000002	BEARING JOURNAL COVER
22 - FLANGIA60RIPCUS	FRONT BEARING COVER
23 - ROND60BLOCMAT	ROLL RETAINER
24 - VTDEM36MB	ROLL NUT
25 - PATTINO60GUIDA	REAR AND FRONT GUIDE
26 - PATTINO60ANT	FRONT GUIDES OF BLOCK
27 - PATTINO60POS	REAR GUIDES OF BLOCK
28 - RINF60CENSPALLA	CENTRAL REINFORCEMENT SPACER
29 - DIST60LATSPALLA	CENTRAL SPACER
30 - RINF60LATSPALLA	LATERL REINFORCEMENT SPACER
31 - SPIN60BLOCALB	LOCKING PIN
32 - MOLLACPH60L50	SPRING OF LOCKING PIN
33 - CHTRAINCPH60	SHAFT ROLL KEY
34 - CH60ALBTRING	PRINCIPAL SHAFT GEAR KEY
35 - CH1409090	CENTRAL GERA SHAFT KEY
36 - CARTER60PROTTAS	COVER
37 - VTCE16X045	SCREW
38 - VTCE12X040	SCREW
39 - VTCE08X020	SCREW
40 - VTCE08X055	SCREW
41 - VTCE06X012	SCREW
42 - VTCE08X014	SCREW

LEGEND TABLE N°1

DRIVE TRAIN

43 -	VTCE08X020	SCREW
44 -	VTSPEI08X010	SCREW
45 -	VTCE06X012	SCREW
46 -	VTGRPPIANA10X035	SET SCREW
47 -	VTGRPPIANA16X016	2° SET SCREW
48 -	VTCE05X012	KEY
49 -	PIASTRA60ANCPIST	ANCHORAGE CYLINDER FLANGE
50 -	PIASTRA60FISSPIN	LOCKING PIN FLANGE
51 -	VTCE12X045	SCREW
52 -	SUPP60RIBALTSX	REINFORCEMENT BAR
53 -	VTSEEGEREST030	SEEGER
54 -	VA000002	BEARING COVER
55 -	CU062062RS	MOTOR SHAFT BEARING

DRIVE TRAIN

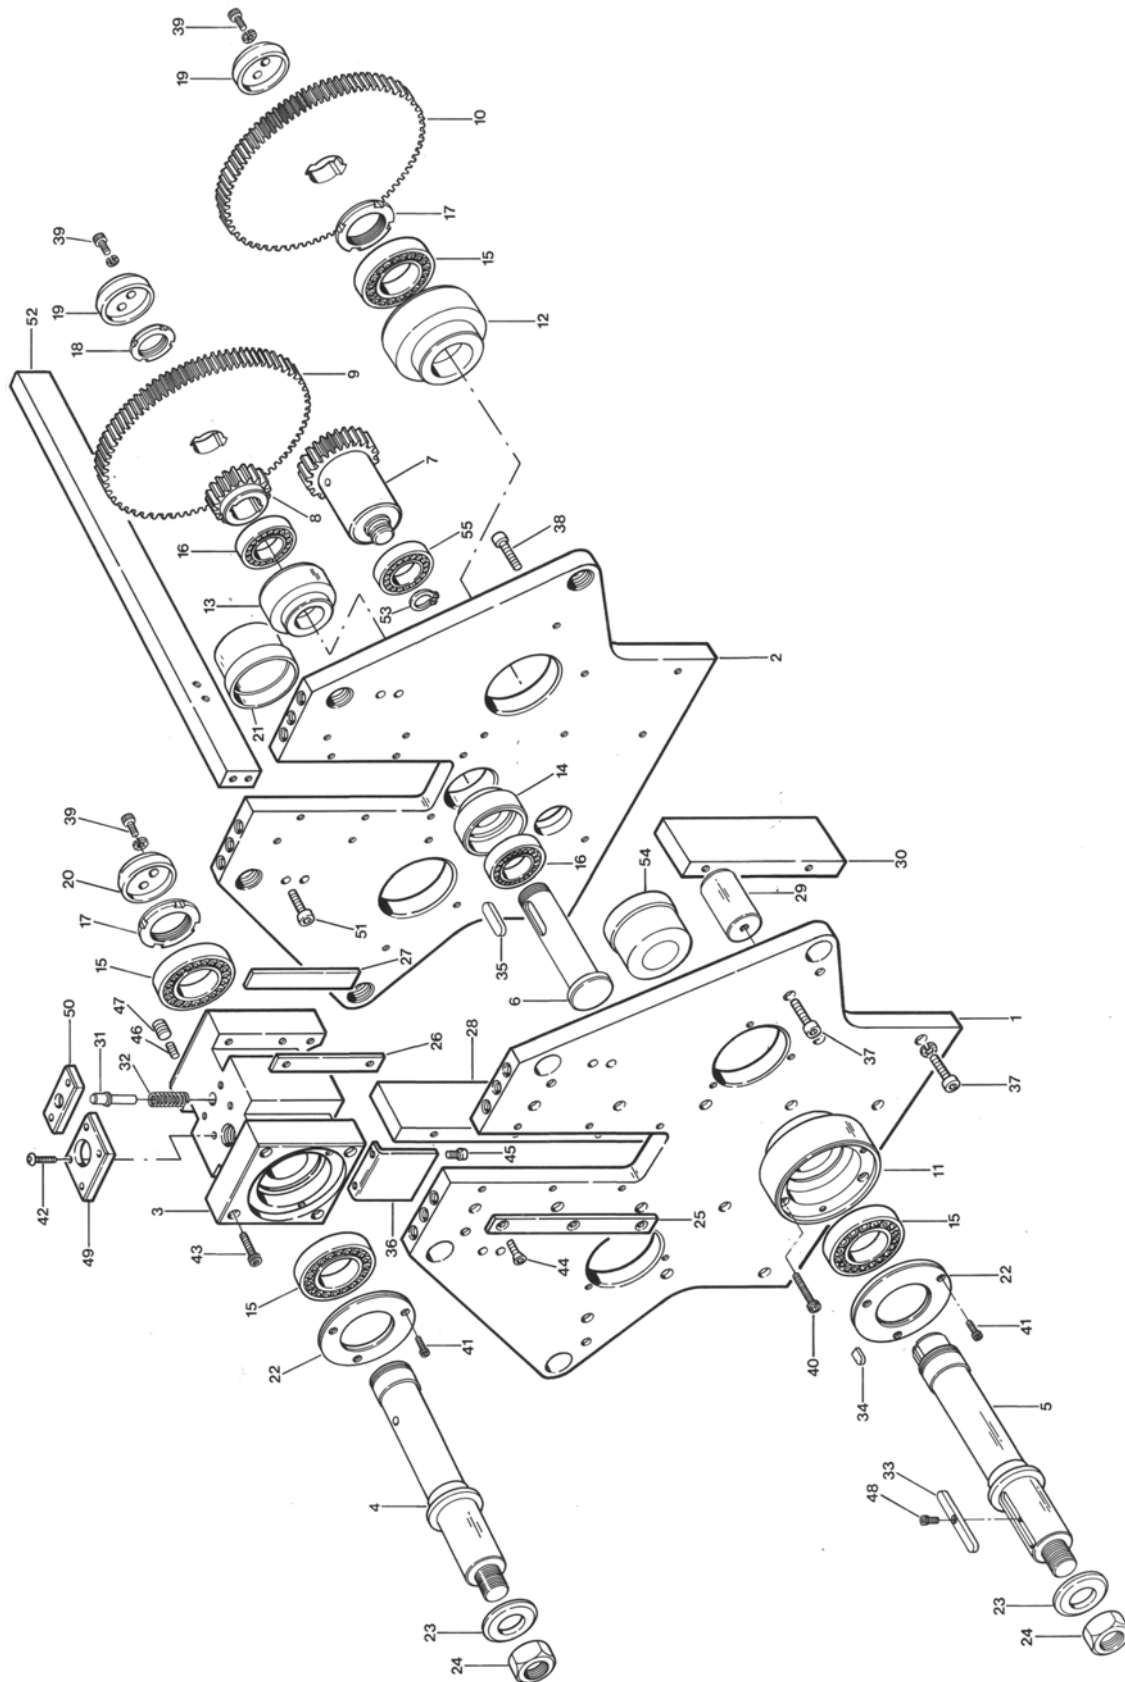


LEGEND TABLE N°2

ROLLS AND GUIDES ROLLS

1 - VTGRPCIL08X012	LOCK SCREW
2 - MATR60L02SP18	UPPER SHOULDER FLANGE NARROW SMOOTH
3 - MATR60L46SP42	UPPER SHOULDER FLANGE WIDE SMOOTH
4 - DIST60LSP265	UPPER CORE SPACER SMOOTH 26.5 mm
5 - DIST60LSP225	UPPER CORE SPACER SMOOTH 22.5 mm
6 - DIST60LSP185	UPPER CORE SPACER SMOOTH 18.5 mm
7 - DIST60LSP145	UPPER CORE SPACER SMOOTH 14.5 mm
8 - MATR60Z02SP18	LOWER SHOULDER FLANGE NARROW KNURLED
9 - MATR60Z46SP42	LOWER SHOULDER FLANGE WIDE KNURLED
10 - DIST60ZSP265	LOWER CORE SPACER KNURLED 26.5 mm
11 - DIST60ZSP225	LOWER CORE SPACER KNURLED 22.5 mm
12 - DIST60ZSP185	LOWER CORE SPACER KNURLED 18.5 mm
13 - DIST60ZSP145	LOWER CORE SPACER KNURLED 14.5 mm
14 - TA0000065	CALIBRATING SPACER
15 - TUBO60RADD	CYLINDRICAL CORRECTING ROLL
16 - ASTA60RADD	CORRECTING ROLL PIN
17 - SNODO60RADD	OSCILLATING JOINT
18 - CU060042RS	BEARING
19 - DIST60CUSRADD	BEARING SPACER
20 - VITE60REGRADD	SCREW
21 - VTRSC24	ADJUSTING SCREW
22 - VTCE24X045	RATAINER


ROLLS AND GUIDES ROLLS

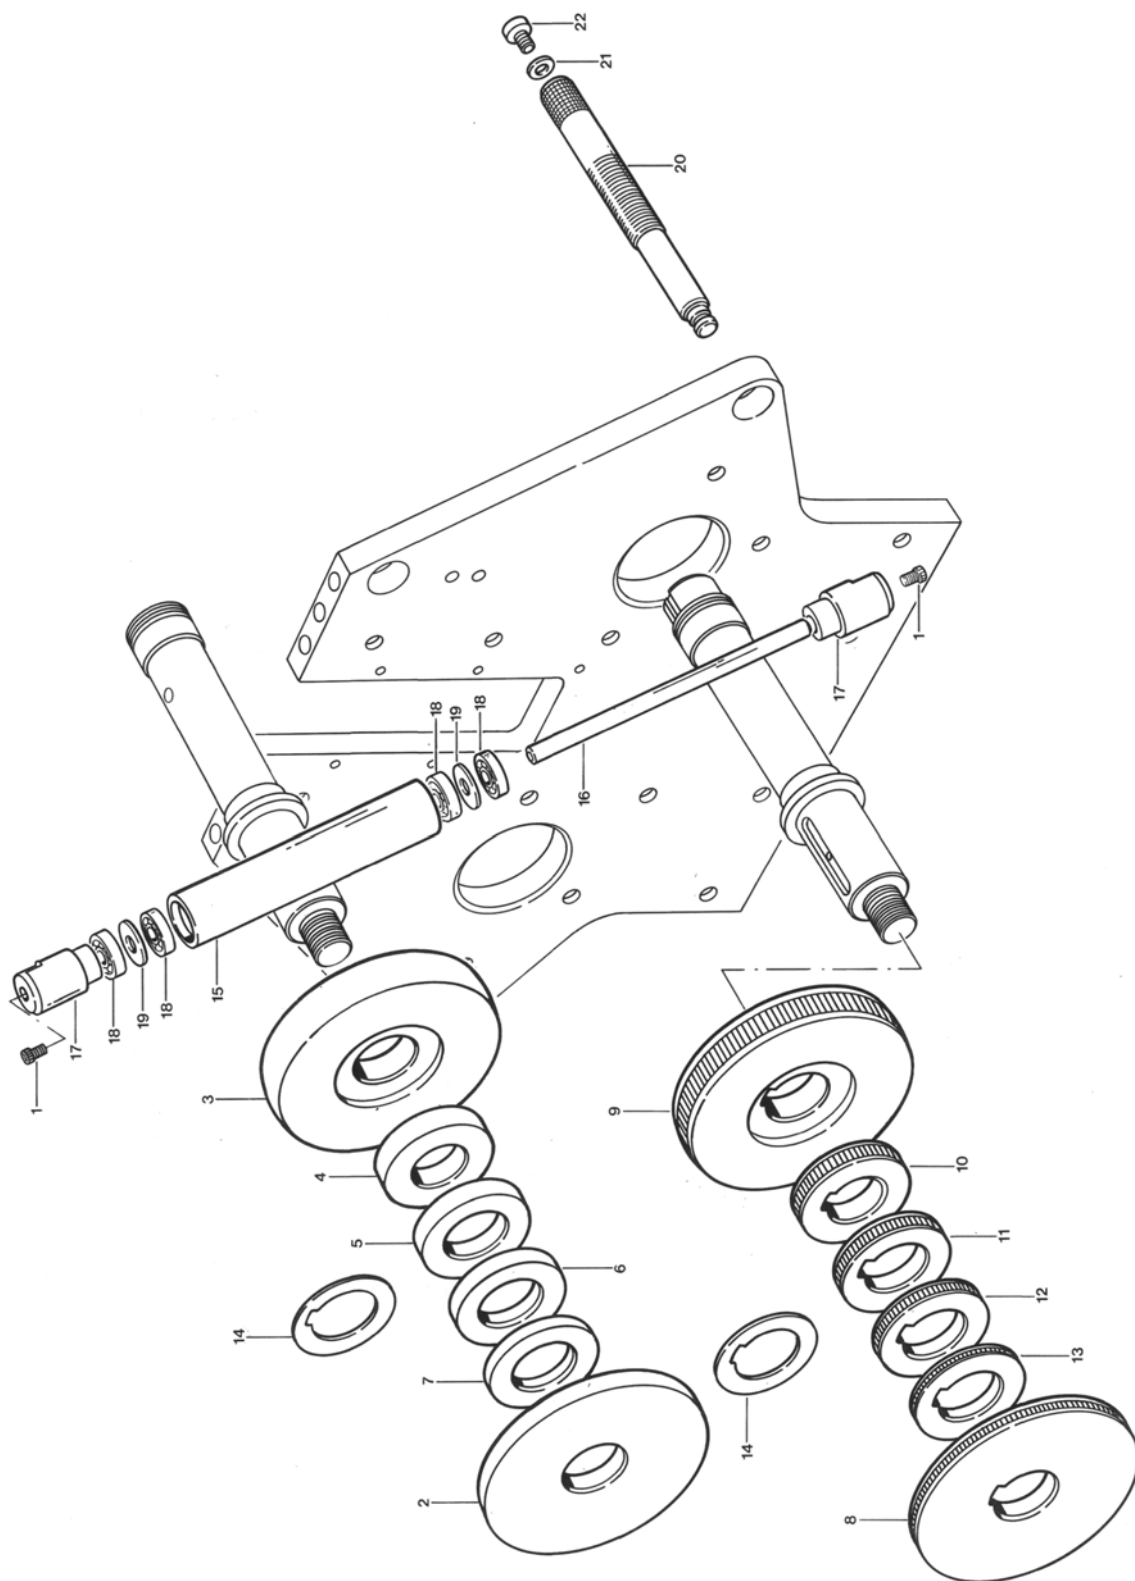

LEGEND TABLE N°3

HYDRAULIC SYSTEM - MOTOR TOP FORMING ROLL POSITIONING

1 -	<u>PIASTRABASECPH60</u>	BASE PLATE
2 -	<u>CILCPH60</u>	HYDRAULIC CYLINDER
3 -	<u>MR402P158</u>	MOTO REDUCER
4 -	<u>SUPP60SPINETTA</u>	LOCKING PIN BLOCK
5 -	<u>VTGOLM16</u>	EYE BOLT
6 -	<u>VTCE24X045</u>	CYLINDER LOCK SCREW
7 -	<u>RONDBONDED014</u>	RETAINER
8 -	<u>NIPPLO014</u>	FITTING
9 -	<u>EVVRS710</u>	PILOTED NON RETURN VALVE
10 -	<u>TBBR014FF0670X</u>	OIL HOSE
10a -	<u>TBBR014FF0710X</u>	OIL HOSE
11 -	<u>MASSELLON12</u>	MANIFOLD PLATE
12 -	<u>EVDMD1DS455</u>	SOLENOID VALVE
13 -		SOLENOID VALVE LOCKING SCREW
14 -		SOLENOID VALVE PLUG
15 -		MANIFOLD PLATE SCREW
16 -		WASHER
17 -		WASHER
18 -	<u>MINIMEX014</u>	PRESSURE GAUGE CONNECTION
19 -		HYDRAULIC PUMP/TANK
20 -	<u>MICROEXZ156</u>	SAFETY LIMIT SWITCH
21 -	<u>VTCE04X025</u>	SCREW
22 -	<u>PIASTRTRASDCPH40</u>	SUPPORT
23 -	<u>VTCE06X016</u>	SCREW
24 -	<u>TPPA1F125S2XL123</u>	LINEAR TRANSDUCER
25 -	<u>STAFFA60SUPPOMPA</u>	HYDRAULIC PUMP/TANK SUPPORT PLATE
26 -	<u>VTRSC10</u>	WASHER
27 -	<u>VTCE10X020</u>	SCREW
28 -	<u>VTCE08X020</u>	SCREW
29 -	<u>VTRSC08</u>	RETAINER
30 -	<u>VTCE12X040</u>	SCREW
31 -	<u>VTRP12</u>	RETAINER
32 -	<u>VTRSC16</u>	RETAINER
33 -	<u>VTCE16X045</u>	SCREW
34 -	<u>MOLLACPH60L25</u>	LOCKING PIN SPRING
35 -	<u>SPIN60RIMANDO</u>	LOCKING PIN
36 -	<u>VTCE05X055</u>	SCREW
37 -	<u>TBBR018FF0670</u>	OIL HOSE
37a -	<u>TBBR018FF0760</u>	OIL HOSE
38 -		PUMP MOTOR
39 -		OIL TANK
40 -		PRESSURE TRANSDUCER (OPTIONAL)
41 -	<u>RONDBONDED014</u>	RETAINER
42 -	<u>NIPPLO014X018</u>	FITTING

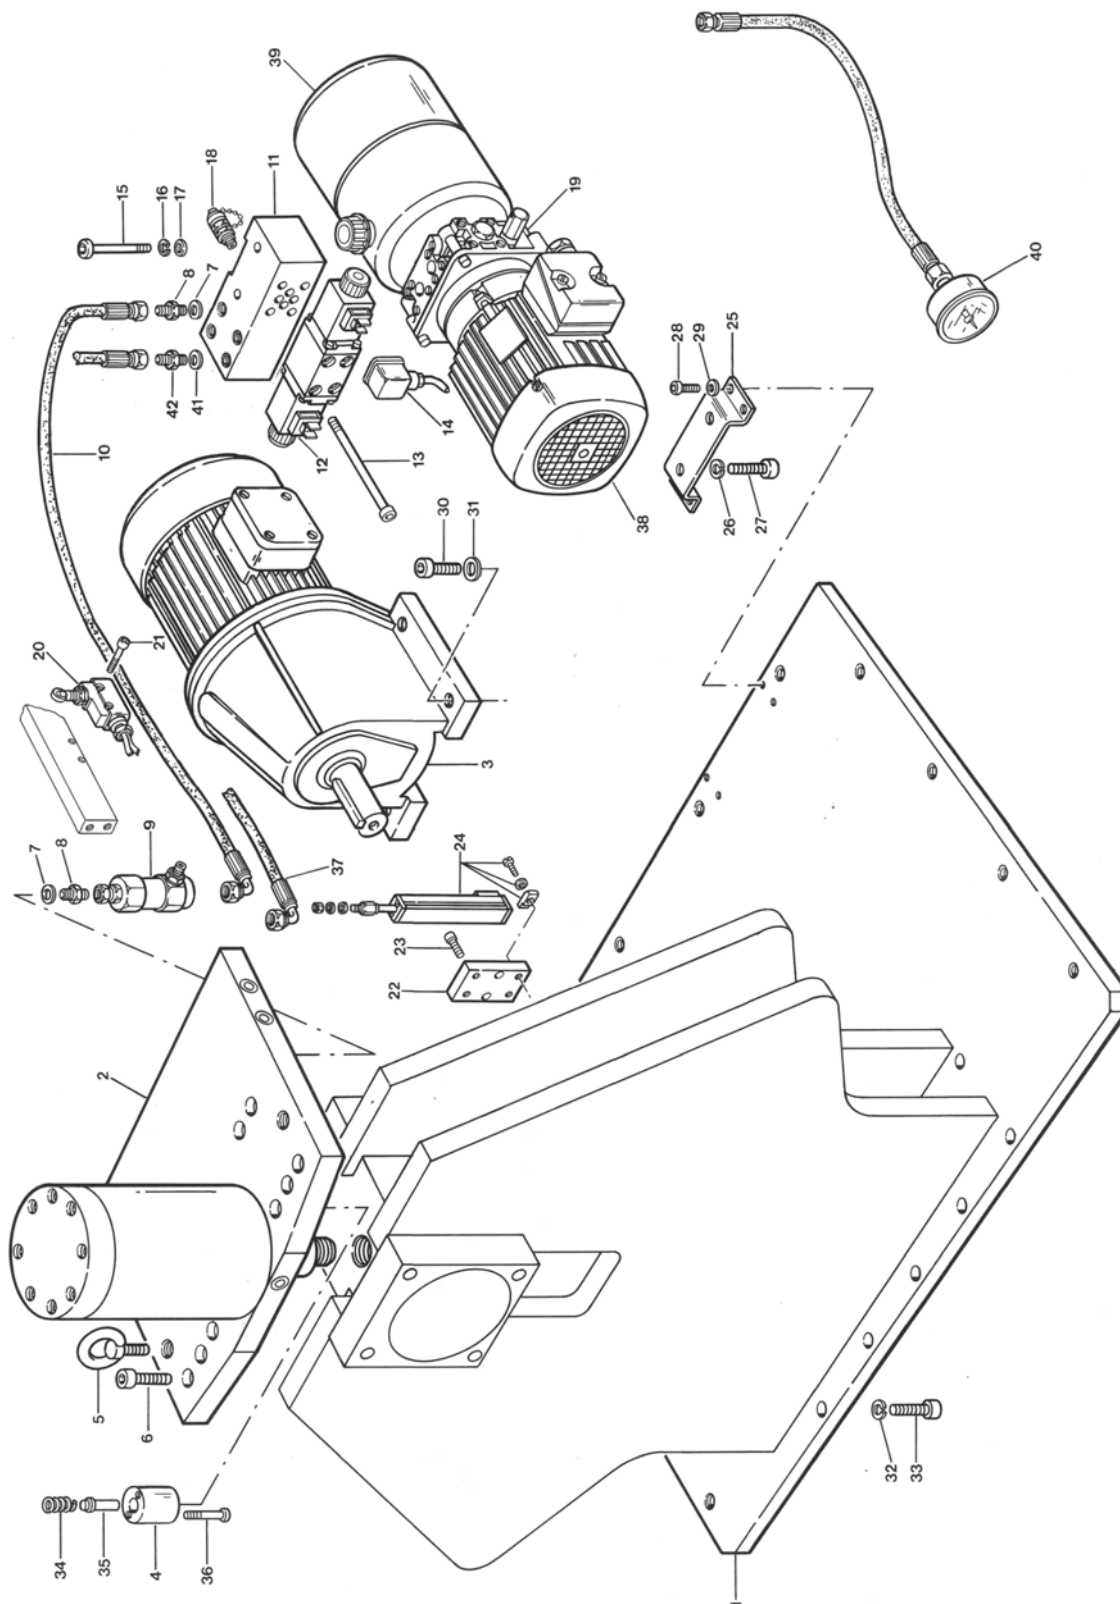


LEGEND TABLE N°4

BASE COVER ELECTRICAL COMPONENTS

1 - CARTER60BASAM	BASE
2 - CARTER60POS	REAR COVER
3 - CARTER60ANT	FRONT COVER
4 - CARTER60SPORTQE	ELECTRIC PANEL COVER
5 - TA000033	WARNING SIGN
6 -	MAIN SWITCH
7 -	LOCK
8 - TA000017	WARNING SIGN
9 - TA000117	“CE” SIGN
10 - MANCPH40CP40CPH6	SUPPORT
11 - VTBCE06X012	SCREW
12 -	CLIP NUT
13 - TA000105	WARNING SIGN
14 - TA000155	TECNICAL SIGN
15 - TA000112	WARNING SIGN
16 - PDSPBERSTEINSRIA	FOOT PEDAL
17 -	FOOT PEDAL COVER
18 - TA000022	“BPR” INFORMATION PLATE
19 - PCPG16O	CABLE PASS
20 - PCPG21N	CABLE PASS
21 -	MULTIPIN CONNCTOR
22 - VTBCE04X012	MULTIPIN CONNCTOR SCREW
23 - CABPTEP8	CABLE PROTECTION
24 - VTBCE06X012	SCREW
25 - PIEDINOCPH60INF	FOOT
26 - VTCE12X030	SCREW
27 - PIEDINOCPH60SUP	UPPER REAR FOOT
28 - VTCE12X030	SCREW
29 - CARTEREP8PIANT	PEDAL STAND
30 - EP8PANNELLO	CONTROL PANEL
31 - VTRSC12	RETAINER
32 -	SCREW
33 - STAFFAFISSMACC	ANCHORAGE SUPPORT
34 - SOFFCPH60	FRONTAL PROTECTION
35 - VTBCE04X006	SUPPORT
36 - FUNGOCPS20354060	EMERG. PUSH BUTTON
37 - VTBCE04X012	SCREW
38 - TA000003	“STOP” SIGN
39 -	CLIP NUT
40 - EL000040 / EL000041	


BASE COVER ELECTRICAL COMPONENTS

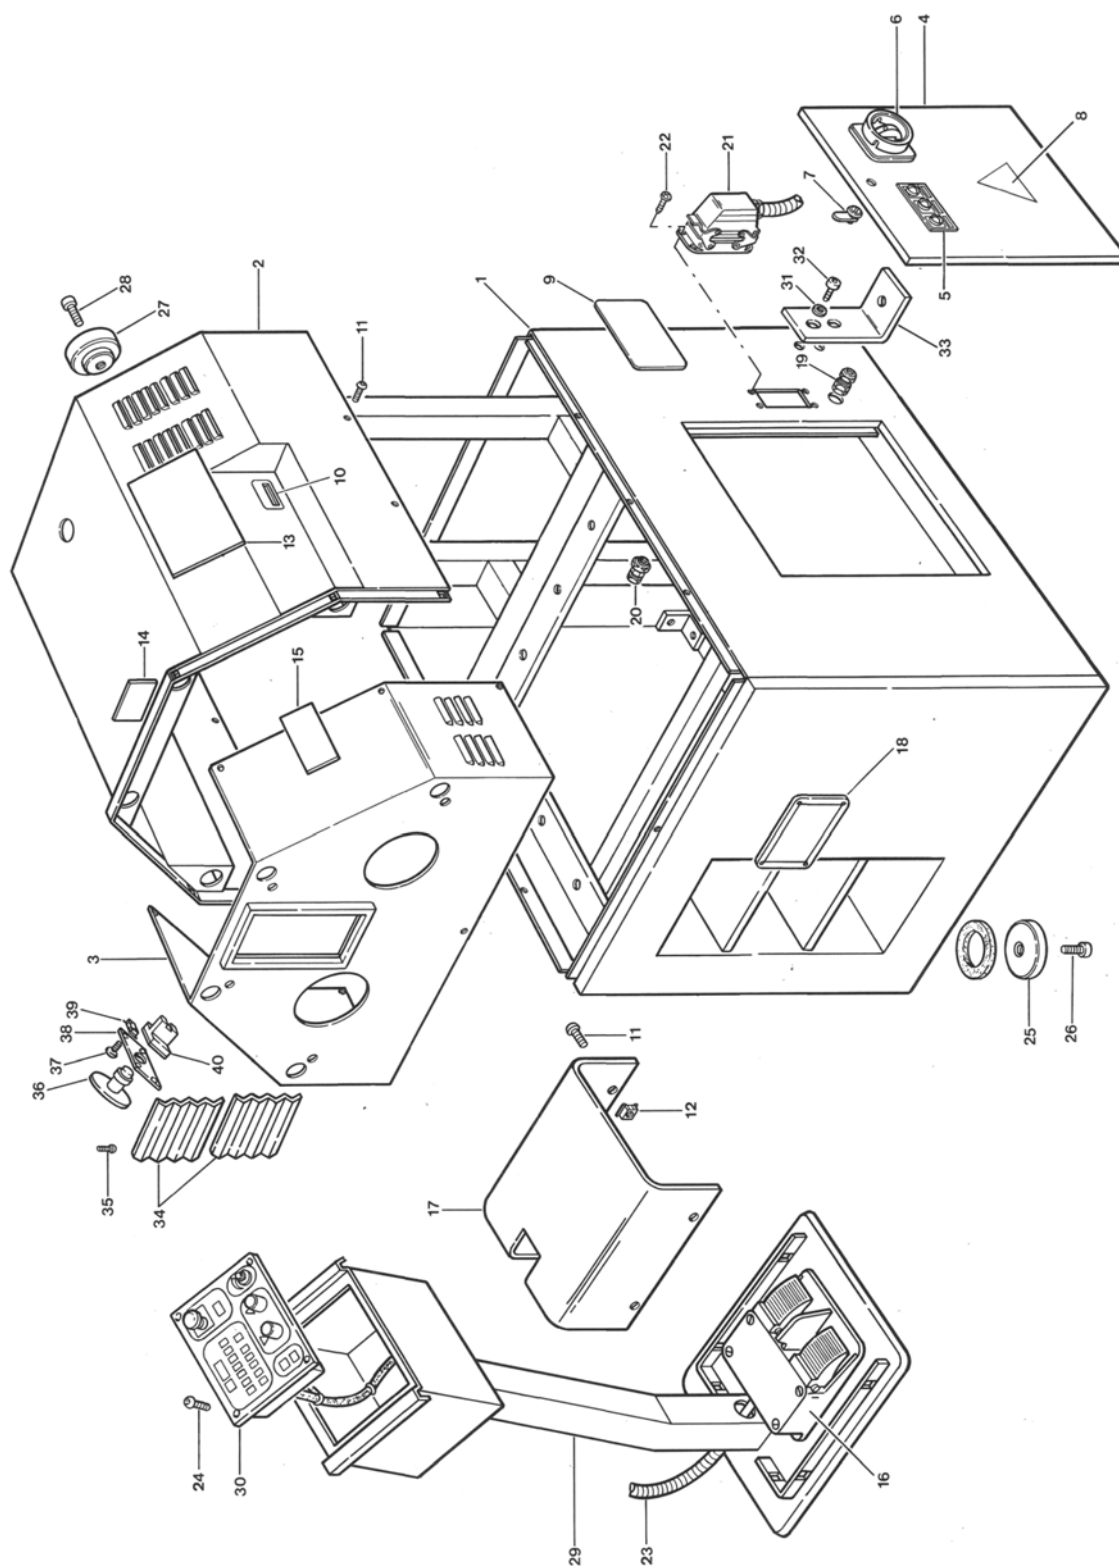


SERVICE TOOLS LIST



CF1B55MM N°1 WRENCH 55 mm

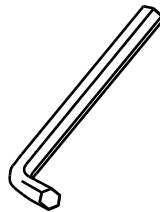

<u>CENERA04MM</u>	N°1	ALLEN WRENCH	4 mm
<u>CENERA05MM</u>	N°1	ALLEN WRENCH	5 mm
<u>CENERA06MM</u>	N°1	ALLEN WRENCH	6 mm
<u>CENERA08MM</u>	N°1	ALLEN WRENCH	8 mm
<u>CENERA10MM</u>	N°1	ALLEN WRENCH	10 mm
<u>CENERA14MM</u>	N°1	ALLEN WRENCH	14 mm

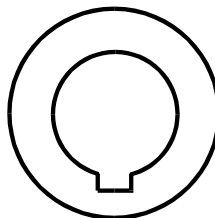

TA000065 N°9 ALUMINUM WASHER 1 mm THICK.