
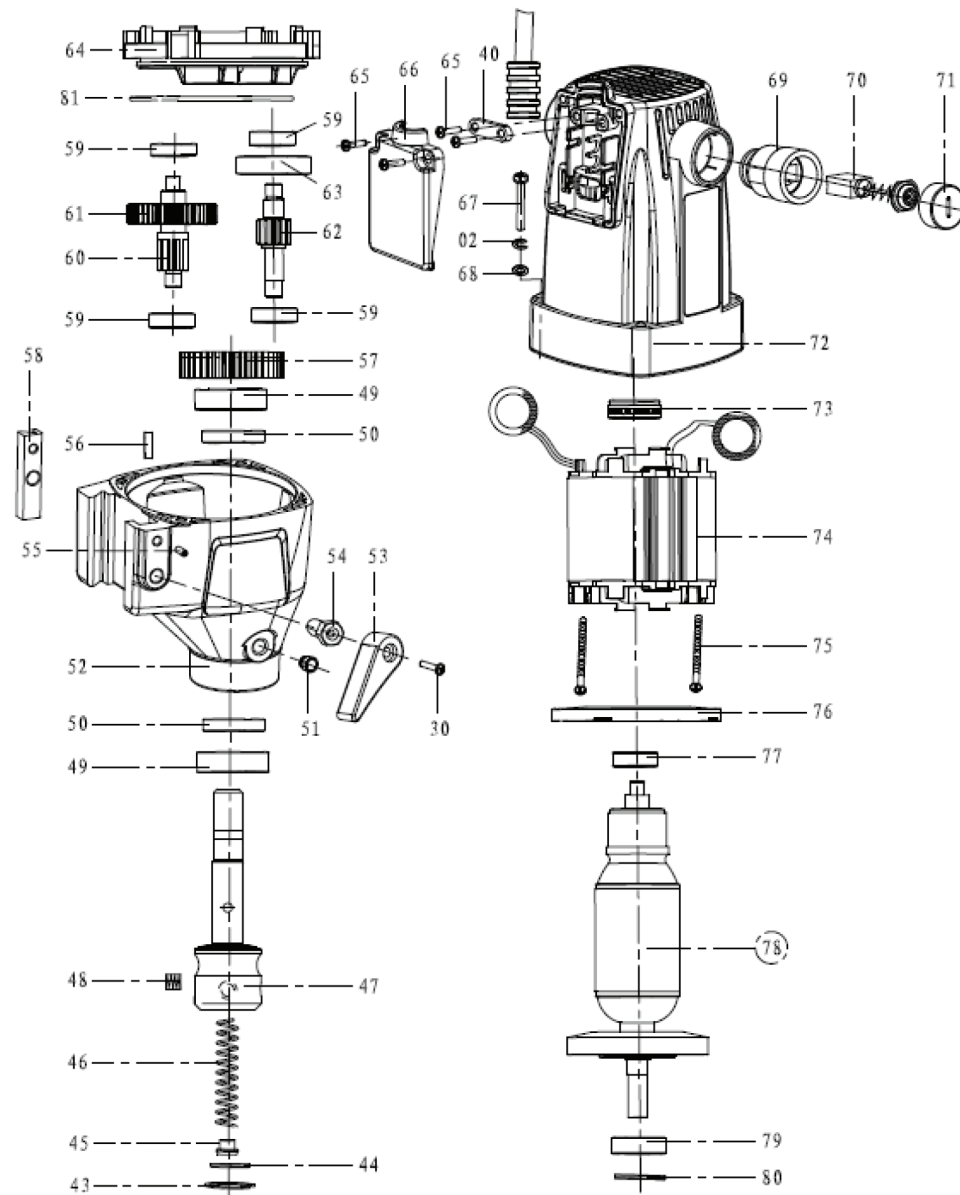
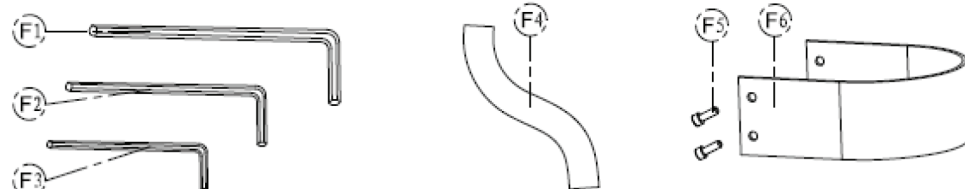


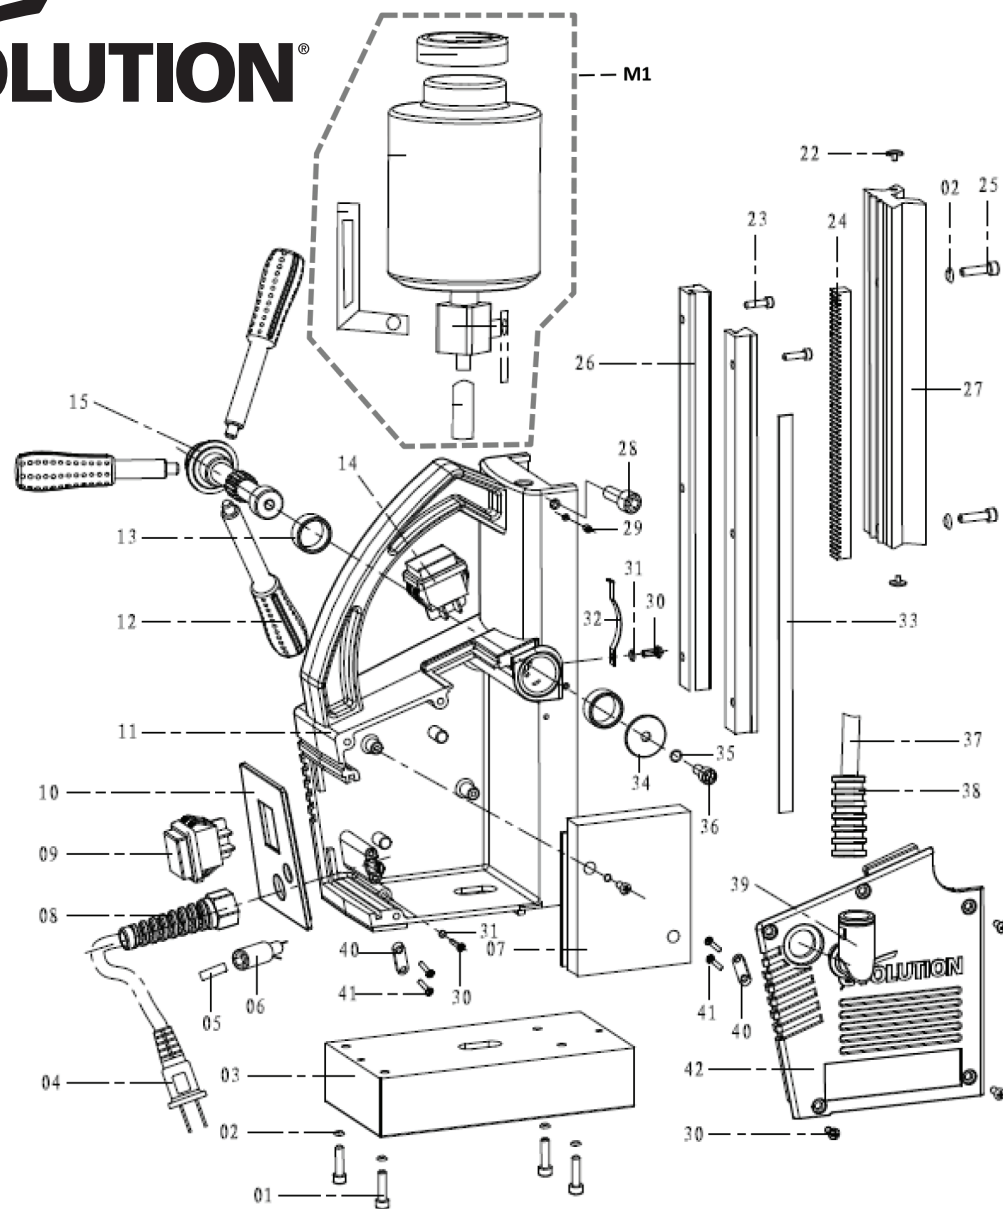

**S28
MAG**

Service Parts List

V: 090-0007.01

28mm Magnetic Drill

**120V
US**

No.	Description	Part Code	Qty	No.	Description	Part Code	Qty	No.	Description	Part Code	Qty
M1	LUBRICANT BOTTLE ASSEMBLY	095-0031	1	65	CROSS HEAD SCREW ST4.2*16	F-TFPX-4.2-16-ST-BO	4	 Service Parts List V: 090-0007.01 28mm Magnetic Drill 120V US			
1	SOCKET HEAD CAP SCREWS M5*40MM	F-SHCS-M5-40-ST-BO	4	66	CABLE COVER	095-0228	1				
2	SPRING WASHER 5MM	F-SWA-M5-ST-BO	6	67	CROSS HEAD SCREW M5*55	F-SPHPZ-M5-55-ST-BO	2				
3	MAGNET 110V	095-0157	1	68	WASHER 5MM	F-W-M5-ST-BO	1				
4	POWER CABLE WITH PLUG 120V US	095-0200	1	69	BRUSH HOLDER	095-0229	2				
5	FUSE 120V	095-0182	1	70	CARBON BRUSH (PR)	095-0230	2				
6	FUSE HOLDER	095-0181	1	71	BRUSH COVER	095-0231	2				
7	PCB 120V	095-0202	1	72	MOTOR HOUSING	095-0232	1				
8	CABLE STRAIN	095-0141	1	73	BEARING SLEEVE	095-0233	1				
9	MAGNETIC SWITCH	095-0142	1	74	FIELD COIL 120V	095-0235	1				
10	SWITCH COVER	095-0203	1	75	CROSS HEAD SCREW ST4.8*65	F-TFPX-4.8-65-ST-BO	2				
11	MAIN HOUSING	095-0146	1	76	FAN BAFFLE	095-0236	1				
12	HANDLE	095-0150	3	77	BEARING 608-2RSR	F-B-608-2RSR	1				
13	SHAFT SLEEVE	095-0145	1	78	ARMATURE 120V	095-0238	1				
14	MOTOR SWITCH	095-0147	1	79	BEARING 6000-2RSR	F-B-6000-2RSR	1				
15	CRANK AXLE	095-0151	1	80	O-RING 25*2	095-0239	1				
22	HALF-ROUND HEAD SCREW M5*8	095-0210	2	81	O-RING 78*1.5	095-0240	1				
23	SOCKET HEAD CAP SCREW M4*20	F-SHCS-M4-20-ST-BO	6	F1	HEX WRENCH 2.5MM	F-HEXKEY-M2.5-ST-BO	1				
24	RACK	095-0154	1	F2	HEX WRENCH 3MM	F-HEXKEY-M3-ST-BO	1				
25	SOCKET HEAD CAP SCREW M5*16	F-SHCS-M5-16-ST-BO	2	F3	HEX WRENCH 5MM	F-HEXKEY-M5-ST-BO	1				
26	GUIDE BAR	095-0153	2	F4	SAFETY STRAP	095-0180	1				
27	DRILL SLIDE	095-0155	1	F5	HEXAGON SOCKET HEAD CAP SCREWS M4*10MM	F-SHCS-M4-10-ST-BO	4				
28	SCREW	095-0211	1	F6	GUARD	095-0246	1				
29	SCREW	F-SSCFP-M5-8-ST-BO	3		LABEL SET 120V	095-0248	1				
30	CROSS HEAD SCREW M4*10	F-SPHPZ-M4-10-ST-BO	10		CARRY CASE	095-0249	1				
31	SPRING WASHER 4MM	F-SWA-M4-ST-BO	2								
32	LEAF SPRING	095-0148	1								
33	PRESSURE BAR	095-0152	2								
34	WASHER	095-0144	1								
35	SPRING WASHER 6MM	F-SWA-M6-ST-BO	1								
36	SOCKET HEAD CAP SCREW M6*16	F-SHCS-M6-16-ST-BO	1								
37	INTERNAL CABLE	095-0212	1								
38	CORD SHEAF	095-0171	1								
39	CABLE CONNECTOR	095-0140	1								
40	CABLE CLAMP	095-0213	3								
41	CROSS HEAD SCREW M4*14	F-SPHPZ-M4-14-ST-BO	4								
42	SIDE COVER	095-0214	1								
43	COLLAR 19MM	095-0215	1								
44	WASHER 8MM	F-W-M8-ST-BO	1								
45	COOLANT SEAL	095-0174	1								
46	SPRING	095-0175	1								
47	MAIN SHAFT	095-0216	1								
48	SCREW M10*10	F-SSCFP-M10-10-ST-BO	2								
49	BEARING 6003-2Z	F-B-6003-2Z	2								
50	OIL SEAL	095-0217	2								
51	COOLANT NOZZLE	095-0218	1								
52	GEARBOX HOUSING	095-0219	1								
53	CLAMPING LEVER	095-0108	1								
54	SPECIAL LOCK SCREW (L/H)	095-0109	1								
55	PIN 4*22	095-0220	1								
56	PIN 5*16	095-0221	1								
57	MAIN SHAFT GEAR	095-0222	1								
58	CLAMPING PIECE	095-0105	1								
59	BEARING 608-2Z	F-B-608-2Z	4								
60	SECONDARY GEAR SHAFT	095-0223	1								
61	SECONDARY GEAR	095-0224	1								
62	GEAR SHAFT	095-0225	1								
63	PRIMARY GEAR	095-0226	1								
64	GEARBOX COVER	095-0227	1								