


MODULAR SAWHORSE W/NOMAD BASE (TSB366-NF1)

TSB366-NF1 includes the **36" x 6" Sawhorse Top Plate & Beam**, two **Adapter Plates**, and one **Nomad Welding Table** (TS3020). While the Nomad base is compatible with both the standard Nomad tabletop and the Sawhorse Top Plate, this manual only covers installation of the Sawhorse Top Plate. For instructions related to the standard Nomad tabletop, please refer to the official TS3020 Nomad Table Manual included separately.

IMPORTANT NOTES:

1. Before starting, make sure the two benchtop feet (approx. 3" x 6") on the underside of the sawhorse have been removed.
2. A separate manual is included for assembling the Nomad Table Base with the standard Nomad top. Follow that guide first to assemble the base structure only.
3. A hex key set is required and not included. Please have your own tools ready.

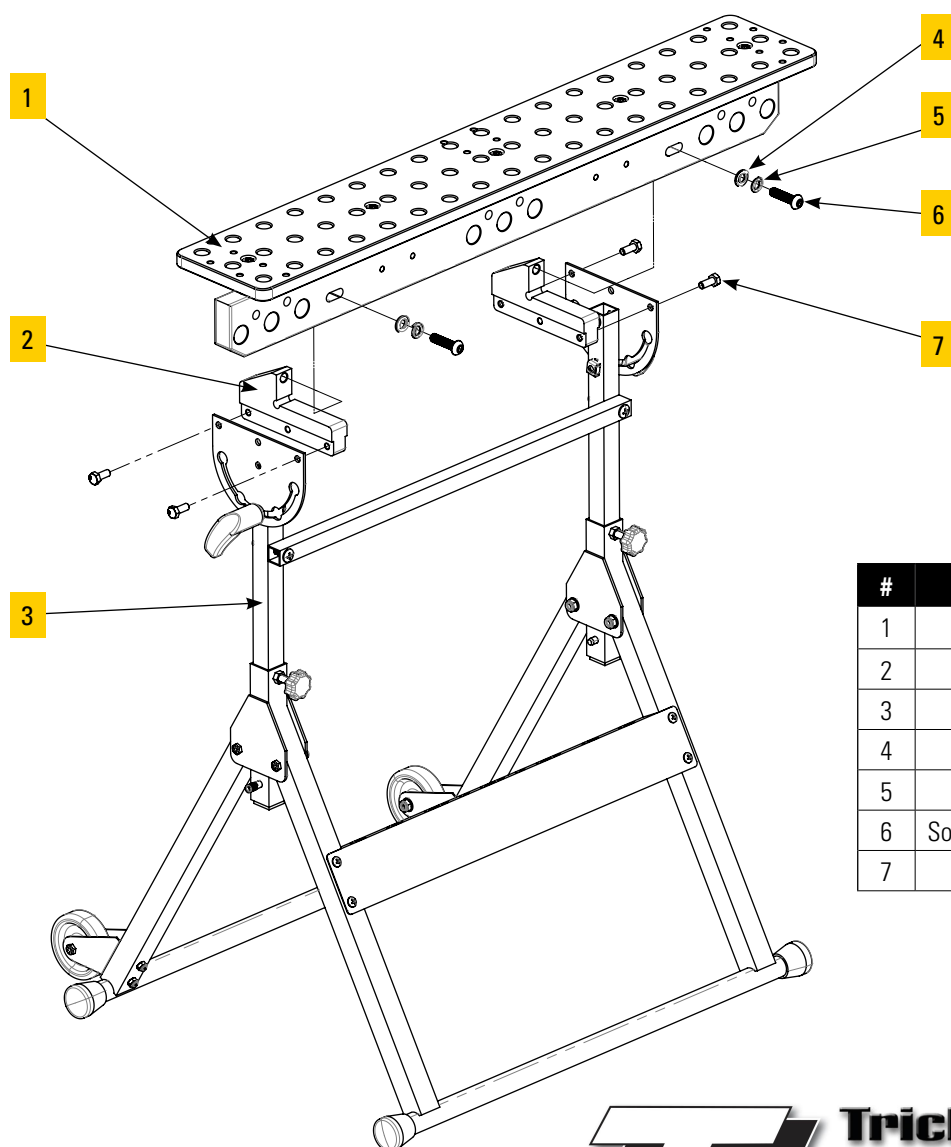


#	Description	Qty.
1	Benchtop	1
2	Mounting Adapter	2
3	NOMAD Table Base	1
4	Steel Washer, M10	2
5	Lock Washer, M10	2
6	Socket Head Shoulder Screw, M8 x 40 mm	2
7	Hex Bolt, M8 x 20 mm	4

MODULAR SAWHORSE W/NOMAD BASE (TSB366-NF1)

STEP-BY-STEP ASSEMBLY


1. Attach Adapter Plates to Nomad Base

Once the Nomad Table Base (#3) is fully assembled (as per the included Nomad base instructions), locate the angle adjustment plates on top. Align the TSB366-NAP Adapter Plates (#2) with the mounting holes on the adjustment plates. Reuse the four M8 x 20mm Hex Bolts (#7) from the Nomad kit to secure the adapter plates. Tighten securely.

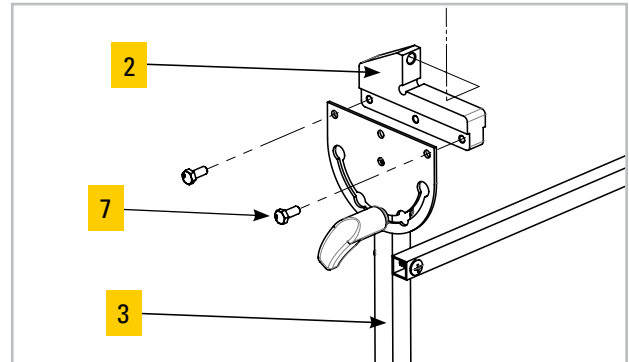

2. Attach Benchtop to Adapter Plates

With the adapter plates attached, rest the TSB366 Sawhorse Benchtop (#1) over the Nomad base (#2 & #3). Insert the Socket Shoulder Head Screws and washers (#4, #5, #6), to fasten the Benchtop through the predrilled mounting slots. Tighten all screws evenly and securely.

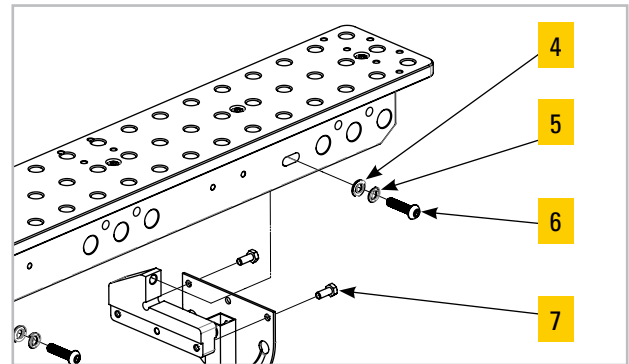

MAINTENANCE

To ensure long-term performance and safety of your Sawhorse Benchtop and Nomad Table Base setup: Inspect all fasteners regularly, especially after transport, repositioning, or heavy-duty use. Retighten as needed. Keep mounting surfaces clean and free of debris to maintain a stable and flush connection between components. Lubricate moving joints or pivot points on the Nomad Table Base as needed using a light machine oil. If used in outdoor or humid environments, check for signs of corrosion on hardware and replace any rusted components promptly. **Do not exceed the recommended load capacity of either the benchtop or the Nomad base.**

LIMITED WARRANTY

Each STRONG HAND TOOL product is warranted to be free from defects in material and workmanship. Return to place of purchase for a replacement if warranty applies.

SAFETY

Ensure all bolts, washers, and mounting plates are securely fastened before each use. Never use the table if it feels unstable, wobbles, or shows signs of loose components. Do not sit, stand, or climb on the benchtop. Only use the work surface on a level and stable floor to prevent tipping or imbalance. Use proper PPE (personal protective equipment) such as gloves and eye protection when working with or around the bench. Keep hands and tools clear of adjustment mechanisms while repositioning or tightening bolts. Follow all additional safety recommendations outlined in the Nomad Table Base user manual.