

by VAN SANT DISTRIBUTING, INC.

HOW TO ATTACH PORTABAND PRO TO BANDSAW PLUS CENTER & FINE-TUNE THE BLADE



USER IS RESPONSIBLE FOR WORKING KNOWEDGE AND USAGE OF A BANDSAW. VAN SANT DISTRIBUTING IS NOT RESPONSIBLE FOR ANY DAMAGES OR INJURIES INCURRED WHILE USING THE PORTABAND PRO WITH OR WITHOUT A BANDSAW.



www.portabandpro.com






1. TOOLS REQUIRED FOR INSTALLATION

- 9/16" Wrench
- 3/4" Wrench
- 11/32" Wrench / Nut Driver
- 3/32" Hex Key
- 4mm Hex Key (included with optional vertical table)

2. INSTALL THE PORTABAND PRO TO A DEWALT DWM-120 PORTABAND SAW

- Remove Top Plate
- Remove Head Lock
- Remove Trigger Arm
- Release Gas Shock
- Unscrew Left and Right 5 Arm Knob Adjusters
- Remove Hook from right side of DeWalt DWM-120 (when applicable)
- Thread Electric Cord through hole in back side of *Portaband Pro*
- Guide Handle of DeWalt Saw through the *Portaband Pro* Handle and slide Saw into place.

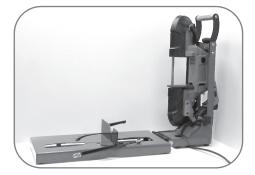

- Tighten Left and Right 5 Arm Knob Adjusters until snug in place.
- Re-install Head Lock and tighten firmly with 9/16" wrench
- Re-install Top Plate and tighten firmly
- Slide Trigger Arm through the saw and re-connect using 11/32" Nut Driver and 3/32" Hex Key

- Check that Trigger Arm functions properly
- Swing the Base up and align the Blade with the Blade Slot, found on the base of the *Portaband Pro*.
- Slide the Base left and right, until your Blade aligns in the blade slot.
- Tighten the 3 Base Hinge Adjuster Bolts with 3/4" wrench.
- Fine tune the blade adjustment by simultaneously turning both the left and right 5-Arm Knob Adjusters.
- Tighten the 2 Top Adjuster Plate Bolts with a 9/16" wrench
- Re-attach Gas Shock
- Give your new Portaband Pro a test run

3. HOW TO ATTACH OPTIONAL VERTICAL ACCESSORY TABLE

- Using the DeWalt 5mm hex key, remove the adjustable base shoe from Saw
- Install the Portaband Pro Table to saw and secure it using the included screws and 4mm hex key





