
CYLINDER STRAP W/BUCKLE - GCB500



BEFORE USING:

- 1. Attach the strap to the yellow Mounting Bracket.
- 2. Make sure two rubber pads are applied to the C-Clamp to create additional friction.

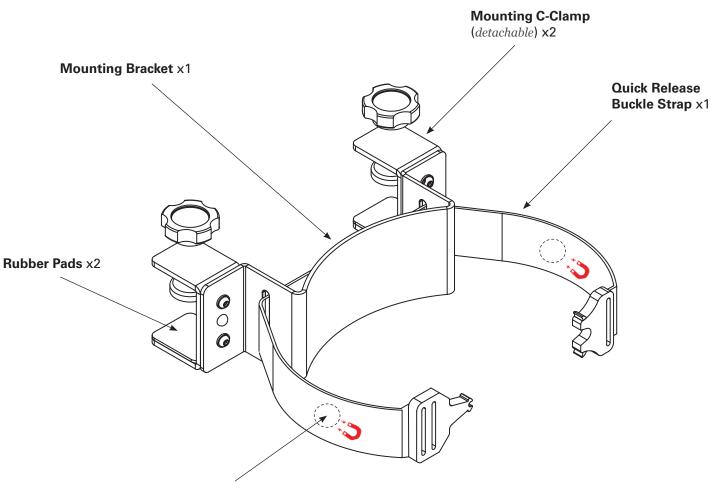

Small Assisting Magnets x2

SPECIFICATIONS:

PN	Dimensions	C-Clamp Capacity	Support Cylinder Size	Nt. Wt.
GCB500	9.3 x 4.1 x 2.8"	0.5 ~ 2"	MAX Ø9.4"	2.4 lb
	236 x 105 x 72 mm	12 ~ 50 mm	MAX Ø240 mm	1.1 kg



Trick-Tools.com

75 Truman Road Pella, IA 50219 Phone:1-877-VAN-SANT E-mail: sales@trick-tools.com




CYLINDER STRAP W/BUCKLE - GCB500




Use WITH C-Clamps


- Use two C-Clamps to mount the yellow Mounting Bracket directly on the edge of any table surface between 0.5" ~ 2" thick.
- 2. Place the cylinder tank against the Mounting Bracket.
- 3. Once the cylinder tank is in place, buckle it up.

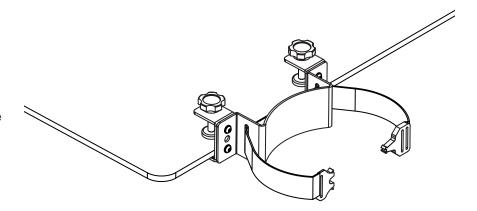

Use WITHOUT C-Clamps

- 1. Unscrew and remove two C-Clamps from the Mounting Bracket.
- Mount the yellow bracket directly on the wall with either four M6 screws, or two 3/8" or M10 Expansion Screws (Not included).
- 3. Once the cylinder tank is in place, buckle it up.

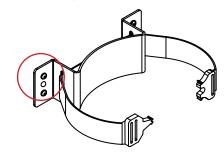

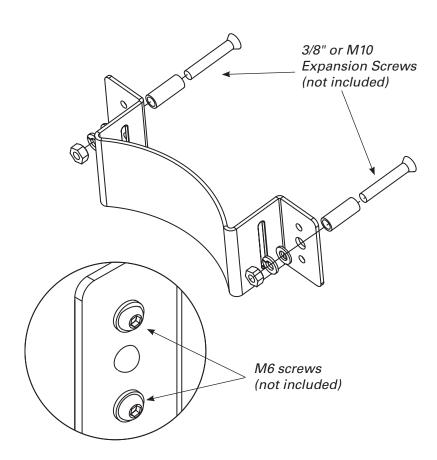

SAFETY

Always check if all the mounting screws are tightened before using. Make sure two rubber pads are applied to the C-Clamp to create additional friction. Small assisting magnets are not meant for holding any cylinder tank. After cylinder in place, always check the strap is buckled and tightened.

LIMITED WARRANTY

Each STRONG HAND TOOL product is warranted to be free from defects in material and workmanship. Return to place of purchase for a replacement if warranty applies.